





D-[]	PRF (A) T12-2DO-	PRF (A) T18-5DO-	PRF (A) T30-10DO-
	40	65	110
	35	60	100
	0	0	0
	12	18	30
	8	20	40
	40	60	100



Sensing distance can be changed by the shape, size or material of the target.
Therefore please check the sensing distance like (a), then pass the target within
range of setting distance (Sa) of (b).







3.5N∙m
25N-m
70N.m
180N.m
-