

A Accessories

Common Accessories

Contact Blocks and LED Blocks for Ø16 Control Switches

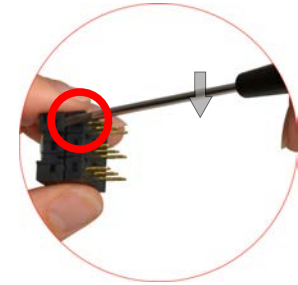
Ordering Information




SA	16	CB	W	
Item				
Applied switches				
Type				
LED color ^{※1}				
LED block				
R	Red			
B	Blue			
G	Green			
Y	Yellow			
W	White			
CB ^{※2}				
CB	Contact block	B contact (normally closed)		
CC	Contact block	C contact (normally open, normally closed)		
L5	LED block	5VDC		
L12	LED block	12VDC		
L24	LED block	24VDC		
16	For Ø16 control switches			
SA	Switch Accessories			

※1. Only for LED blocks.

※2. Only for Ø16 emergency switches.


- **Contact block and LED block removal**
Separate the unit using a flat-head (-) screwdriver.





Item	Appearance	Model	Type	Features
Contact block		SA16-CB	B contact (normally closed)	For Ø16 emergency switches
		SA16-CC	C contact (normally open, normally closed)	—
LED block		SA16-L5□ (5VDC) SA16-L12□ (12VDC) SA16-L24□ (24VDC)	DC voltage type	Diverse, vibrant, high luminance LEDs (red, blue, green, yellow, white)

A Accessories

Locking Handle for Switches

Applied switches	Appearance	Model	Note
Ø16		SA16-LH	For locking switch nuts behind the panels

Accessories By Item

Item	Appearance	Model	Dimensions	Note
Lens remover for Ø16 push button control switches or pilot lights		SA16-RM		Lens remover for push button control switches or pilot lights