 
BWP Series Area Sensor

Flat Area Sensor With Plastic Case

Features

- 13mm slim body with fresnel lens
- Adoption of plastic (PC/ABS) injection case
- Various functions; stop transmission, interference prevention, lightening/flashing JOB indicator, Light ON/Dark ON operation by switch
- Easy to recognize at side, front, and long-distance by high brightness LED of Emitter and Receiver
- Fast response time up to 7ms
- 4 models with various optical axes (8 to 20) and sensing height (140 to 380mm)
- Protection structure IP40 (IEC standard)





Specifications

	NPN open							
Model	collector output	BWP20-08	BWP20-12	BWP20-16	BWP20-20			
iviodei	PNP open collector output	BWP20-08P	BWP20-12P	BWP20-16P	BWP20-20P			
Sensing type		Through-beam						
Sensing distance		0.1 to 5m						
Sensing target		Opaque materials of m	in. Ø30mm					
Optical axis pitch		20mm	20mm					
Number of o	ptical axis	8	12	16	20			
Sensing hei	ght	140mm	220mm	300mm	380mm			
Response ti	me	Max. 6ms (frequency B	selection is max. 7ms)					
Power supp	у	12-24VDC ±10% (ripple P-P: max. 10%)						
Current cons	sumption	Emitter: Max. 80mA, R	Emitter: Max. 80mA, Receiver: Max. 80mA					
Light source		Infrared LED (850nm modulated)						
Operation m	ode	Light ON/Dark ON by switch						
Control output		NPN or PNP open collector output • Load voltage: Max. 30VDC • Load current: Max. 150mA • Residual voltage - NPN: Max. 1V, PNP: Min. 2.5V						
Protection c	rcuit	Reverse power polarity, Output short-circuit protection						
Insulation resistance		Over 20MΩ (at 500VDC megger)						
Synchroniza	tion type	Synchronized by synchronous line						
Interference	protection	Interference protection by transmission frequency selection						
Noise immu	nity	±240V the square wave noise (pulse width: 1μs) by the noise simulation						
Dielectric str	ength	1,000VAC 50/60Hz for 1 minute						
Vibration		1.5mm amplitude or 300m/s² at frequency of 10 to 55Hz (for 1 min) in each X, Y, Z direction for 2 hours						
Shock		500m/s² (approx. 50G) in each X, Y, Z direction for 3 times						
Ambient illumination		Ambient light: Max. 10,0001x (received light side illumination)						
Environment	Ambient temperature	-10 to 55°C, storage: -20 to 60°C						
	Ambient humidity	35 to 85%RH, storage: 35 to 85%RH						
Protection structure		IP40 (IEC standard)						
Material		Case: Polycarbonate/Acrylonitrile butadiene styrene, Sensing part: Polymethyl methacrylate						
Cable		Ø3.5mm, 4-wire, 3m (emitter: Ø3.5mm, 4-wire, 3m) (AWG 24, core diameter: 0.08mm, number of cores: 40, insulator out diameter: Ø1mm)						
Approval		CE						
Weight ^{**1}		Approx. 480g (approx. 280g)	Approx. 520g (approx. 320g)	Approx. 620g (approx. 360g)	Approx. 680g (approx. 430g)			

X1: The weight includes packaging. The weight in parenthesis is for unit only.



(A) Photoelectric Sensors

(C) Door/Area Sensors

(D) Proximity Sensors

(F) Rotary Encoders

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/ Sockets

(I) SSRs / Power Controllers

(J) Counters

(K) Timers

(M) Tacho / Speed / Pulse Meters

(N) Display Units

(O) Sensor Controllers


(P) Switching Mode Power Supplies


(Q) Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels

C-33


^{*}The temperature or humidity mentioned in Environment indicates a non freezing or condensation environment.

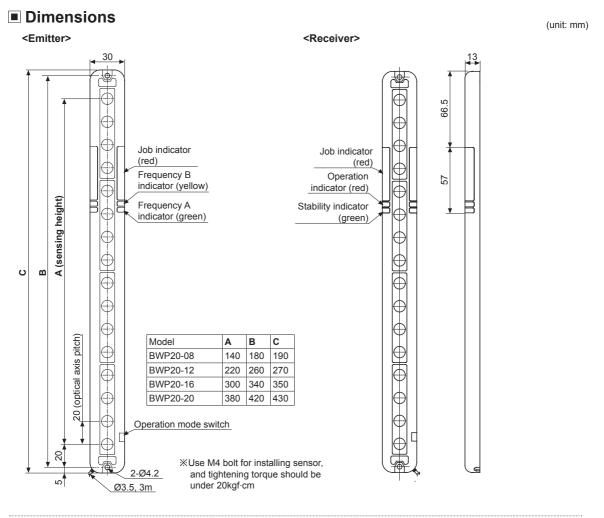

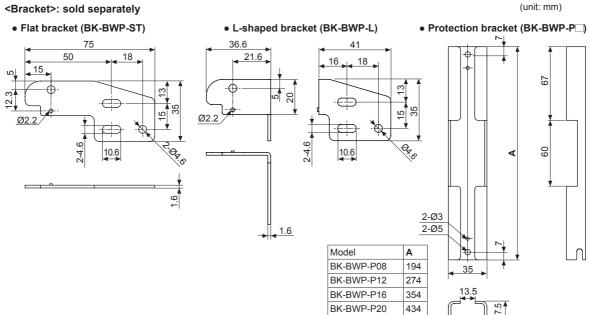

C-34 Autonics

■ Feature Data

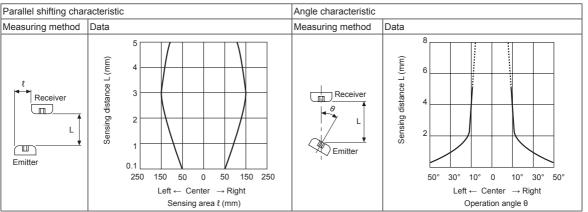


■ Input/Output Circuit And Connection Diagram

• NPN open collector output


(blue) 0V 12-24VDC Emitter Main circuit (brown) +V (black) JOB (white) SYNC (white) SYNC (brown) +V (black) OUT Load Receiver Main circuit Overcurrent protection (blue) 0V

• PNP open collector output

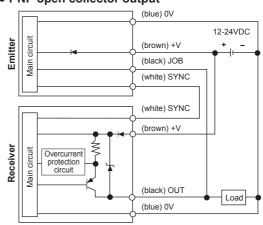

XIf the receiver OUT (black) line and the emitter JOB (black) line are not connected each other, the JOB indicator of the emitter is not operated and maintain the light status.

Operation Timing Diagram

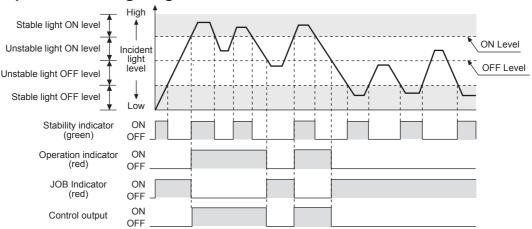

XThe waveforms of operation indicator, job indicator, and control output are the state of operation for Light ON, but in case of Dark ON, it is opposite operation against Light ON mode.

(A) Photoelectric Sensors

(B) Fiber Optic

(C) Door/Area

(D) Proximity Sensors

(E) Pressure

(F)

(F) Rotary Encoders

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/ Sockets

(H) Temperature Controllers

> (I) SSRs / Power Controllers

(L)

(M) Tacho /

(N)
Display
Units

O)

Controllers

(P) Switching Mode Power Supplies


(Q) Stepper Motors & Drivers & Controllers


(R) Graphic/ Logic Panels

(S) Field Network Devices

(T) Software

Structure

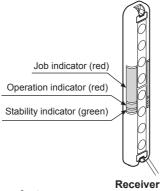

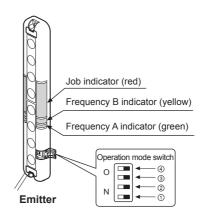

Mounting of bracket


No	Function	Switch OFF	Switch ON
1	Transmission frequency selection	Frequency A	Frequency B
2	Light ON/Dark ON selection	Light ON operation	Dark ON operation
3	Steady/flashing light of Job indicator selection	Job indicator with Steady light	Job indicator with Flashing light
4	Job/TEST selection	Normal mode	TEST mode

Functions

○ TEST (stop transmission)

When selecting TEST mode, emit is stopped and green &yellow LED of emitter flashes. It is available to check whether sensor operates properly with stopping the transmission in TEST mode. It is changed to light OFF status when emit the transmission is stopped, control output is OFF in Light ON mode and ON in Dark ON mode.

 Control output pulse for TEST input



Interference prevention

In case of using 2pcs of sensor in serial or parallel in order to extend sensing width, it may cause sensing error because of light interference.

This function is operating a sensor in transmission frequency A and another sensor in transmission frequency B to avoid these sensing errors by the light interference.

	Operation mode switch	Frequency A, B indicator		
Sensor (A) (transmission frequency A)	ON ← ④ □ □ □ FREQ.A	Frequency B (yellow) Frequency A (green)		
Sensor ® (transmission frequency B)	ON ←	Frequency B (yellow) Frequency A (green)		

O Light-ON / Dark-ON operation mode

The control output is ON when it is light ON in Light ON and the control output is ON when it is light OFF in Dark ON. It is available to select with user's preference.

	Operation mode switch	Control output operation
Light ON	ON ← ③	It is ON when it is light ON.
Dark ON	ON ← ④ □□□ ③ □□ ② □□□ Dark ON ① □□	It is ON when it is light OFF.

Lightening/Flashing JOB indicator

JOB indicator will be lighted and flashed to make out work sensing operation more easily.


Operation mode switch	JOB indicator operation
ON ← ⊕ ⊕ □ Lighting ⊕ ⊕	Lighting indicator
ON ← Flashing ③ ① ② ① ① ① ①	Flashing indicator

C-36 Autonics

Installation


O For direction of installation

 Emitter and receiver should be installed as same up/down position.



○ For reflection from the surface of wall and flat

 
When installing it as below the light reflected from the surface of wall and flat will not be shaded. Please, check whether it operates normally or not with a sensing target before using. (interval distance: min. 0.3m)




O For prevention of interference

It may cause interference when installing more than 2 sets of the sensor. In order to avoid the interference of the sensor, please install as following figures and use the interference protection function.


Transmission direction should be opposite between 2 sets

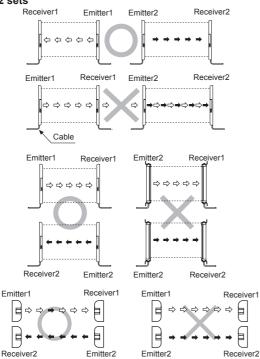

 • Baffle should be installed between 2 sets.



 • It should be installed out of the interference distance



Operation Indicator

	Emitter		Receiver				
Item	Indicator		Indicator			Control	
Item	Green	Yellow	JOB Indicator	Green	Red	JOB Indicator	output
Power on	₽		_	_		_	_
FREQ. A operation	\Diamond		_	_	_	_	
FREQ. B operation	₩	₩	_	_	_	_	_
TEST	▶	•	₽	₩		\ODE	OFF
Stable light ON	_	_		\rightarrow	₩		ON
Unstable light ON	_	_			\Diamond		ON
Unstable light OFF	_	_	\ \			\ \	OFF
Stable light OFF	_	_	\rightarrow	\rightarrow		\rightarrow	OFF
Flashing function ON		_	•	₩		1	OFF
Synchronous line malfunction			₽	▶	•	\rightarrow	OFF
Overcurrent			✡	1	1	✡	OFF

Display classification list		
₽	Light ON	
•	Light OFF	
Flashing by 0.3 sec		
1	Flashing simultaneously by 0.3 sec	
● ●	Cross-Flashing by 0.3 sec	

**The operation of 'Operation indicator (red)', 'Job indicator (red)', 'Control output' is for Light ON, in case of Dark ON, it is opposite operation against Light ON. (In case, malfunction of synchronous line and over current, control output is OFF regardless of the mode.)

■ Troubleshooting

Malfunction	Cause	Troubleshooting		
	Power supply Cable incorrect	Supply rated power.		
Non-operation	connection or disconnection	Check the wiring.		
	Rated connection failure	Use it within rated sensing distance.		
Non-operation	Pollution by dirt of sensor cover	Remove dirt by soft brush or cloth.		
in sometimes	Connector connection failure	Check the assembled part of the connector.		
	Out of rated sensing distance There is an obstacle to	Use within rated sensing distance.		
Control output is OFF even though there is	cut off the light emitted between emitter and receiver	Remove the obstacle.		
not a target object.	There is a strong electric wave or noise generated by motor, electric generator, high voltage line etc.	Put away the strong electric wave or noise generator.		
LED displays for synchronous line	Synchronous line incorrect connection or disconnection	Check the wiring.		
malfunction	Break of synchronous circuit of emitter or receiver	Contact our company.		
LED displays for over	Control output line is shorten	Check the wiring.		
current	Over load	Check the rated load capacity.		

(A) Photoelectric Sensors

(B) Fiber Optic

> (C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure

F) Rotary Encoders

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/ Sockets

Temperature Controllers

(I) SSRs / Power Controllers

> (J) Counters

(K) Timers

(L) Panel Meters

(M) Tacho / Speed / Pulse Meters

(N) Display Units

(O) Sensor Controllers

(P) Switching Mode Power Supplies

(Q) Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels

Field Network Devices

(T) Software

Autonics C-37