#### **Autonics**

# **ROTARY ENCODER(INCREMENTAL TYPE) E100H SERIES**

M



Thank you very much for selecting Autonics products. For your safety, please read the following before using.

## Caution for your safety

XPlease keep these instructions and review them before using this unit.

XPlease observe the cautions that follow:

XThe following is an explanation of the symbols used in the operation manual.

∆caution:Injury or danger may occur under special conditions.

#### 

1. When use this unit for controlling highly effective equipment to human or properties. (Medical instrument, Vehicles, Train, Airplane, combustion apparatus, entertainment etc.), it requires installing a fail safety

It may cause serious human injury or a fire, property.

# **⚠** Caution

- 1. Do not drop water or oil on this unit.
- It may cause damage or miscontrol due to malfunction.
- 2. Please observe voltage rating.
- It may shorten the life cycle or damage to the product.
- 3. Please check the polarity of power and wrong wiring.
- It may result in damage to this unit 4. Do not short circuit the load.
- It may result in damage to this unit.

## Ordering information

E100H	35	_ 10000 -	- 3	- N -	<b>- 24</b>
Series	Shaft inside diameter	Pulse/1Revolution	Output phase	Output	Power supply
Diameter ø 100mm, Hollow shaft type	ø 35mm	512, 1024, 10000	3 : A, B, Z 6 : A, Ā, B, B, Z, Z	T : Totem pole output N : NPN open collector output V : Voltage output L : Line driver output	5 : 5VDC ± 5% 24 : 12-24VDC ± 5%

# Control output diagram

Totem pole output NPN open c		NPN open col	ollector output Voltage outp		t Line driver output		put
Rotary encoder circuit	Load connection	Rotary encoder circuit	Load connection	Rotary encoder circuit	Load connection		Load connection
Sink cur Max. 30 Source curren Max. 1	Output +	Main circuit	Output + Sink current::Max. 30mA	Main circuit	Source current: Max. 10mA Output Load	Main circuit	A phase output -

- The output circuit of A, B, Z phase are the same. (Line driver output is A, Ā, B, B, Z, Z)
- Totem pole output can be used for NPN open collector output type(%1) or voltage output type(%2).
- **X**The above specifications are subject to change and some models may be discontinued without notice

## Specifications

Item			Diameter ø 100mm hollow shaft type Incremental Rotary encoder		
Mode	el		E100H353-V- E100H356-L-		
Revolution(P/R)×1		l	512, 1024, 10000		
Output phase		se	A, B, Z phase (Line driver output A, A, B, B, Z, Z phase)		
_	Phase difference of output		Phase difference between A and B: $\frac{T}{4} \pm \frac{T}{8}$ (T=1cycle of A phase)		
		Totem pole output	Low - Load current:Max. 30mA, Residual voltage:Max. 0.4VDC     High - Load current:Max. 10mA,     Output voltage(power supply 5VDC):Min.(power supply-2.0)VDC,     Output voltage(power supply 12-24VDC):Min.(power supply-3.0)VDC		
	Control output	NPN open collector output	Load current : Max. 30mA, Residual voltage : Max. 0.4VDC		
		Voltage output	Load current : Max. 10mA, Residual voltage : Max. 0.4VDC		
		Line driver output	Low - Load current : Max. 20mA, Residual : Max. 0.5VDC High - Load current : Max20mA, Output voltage(power supply 5VDC):Min. 2.5VDC, Output voltage(power supply 12-24VDC):Min.(power supply-3.0)VDC		
iji E	_	Totem pole output			
Electrical specification	Response time (Rise/ Fall)	NPN open collector output	Max. 1μs	Measuring condition     Cable length : 2m,	
ig.		Voltage output		I sink=Max. 20mA	
ect		Line driver output	Max. 0.5μs		
Ш	Max. Response frequency		300kHz		
	Power supply		• 5VDC ± 5%(ripple P-P:Max. 5%) • 12-24VDC ± 5%(ripple P-P:Max. 5%)		
	Current consumption		Max. 80mA(disconnection of the load), Line driver output:Max. 50mA(disconnection of the load)		
	Insulation resistance		Min. 100M $\Omega$ (at 500VDC between all terminals and case)		
	Dielectric str	rength	750VAC 50/60Hz for 1 minute(between all terminals and case)		
Connection			Connector type		
ы ы. д	Starting torq	lue	Max. 300gf-cm(0.03N·m)		
Mechanical specification	Moment of i		Max. 800g·cm²(8× 10 <sup>-6</sup> kg·m²)		
ech	Shaft loading		Radial : 5kgf, Thrust : 2.5kgf		
		ble revolution*2	3600rpm		
Vibration			1.5mm amplitude or 300m/s² at frequency of 10 to 55Hz in each of X, Y, Z directions for 2 hours		
Shock			Max. 75G		
Ambient temperature		ure	-10 to 70°C, Storage:-25 to 85°C		
Ambient humidity			35 to 85%RH, Storage: 35 to 90%RH		
Protection			IP50(IEC standard)		
Cable			ø 5, 5-wire, Length: 2m, Shield cable(Line driver output : ø 6, 8-wire) (AWG24, Core diameter: 0.08mm, Number of cores: 40, Insulator out diameter: ø 1)		
Accessory			Bracket 2EA		
Weig	ht×3		Approx. 1400g(approx. 1130g)		
<u>**1: N</u>	Not indicated	d type is customizab	le		


- Not indicated type is customizable
- ※2: Max. allowable revolution ≥ Max. response revolution

Max. response frequency × 60 sec] [Max. response revolution(rpm) = -Resolution


Please select the resolution to make lower max. revolution than max. allowable revolution.

※3: The weight with packaging and the weight in parentheses is only unit weight. XEnvironment resistance is rated at no freezing or condensation

### Dimension

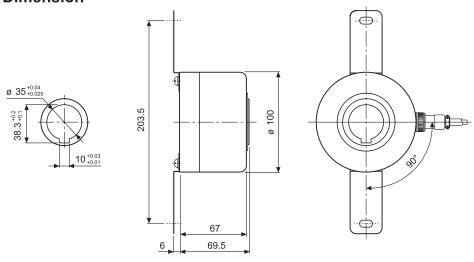

#### Bracket

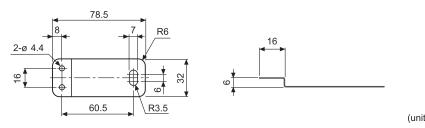

### Connections

●Totem pole output / NPN open collector output / Voltage output



Pin No.	Function	Cable color
1	+V	Brown
2	0V	Blue
3	OUT A	Black
4	OUT B	White
(5)	OUT Z	Orange
6	F.G.	Shield
7	N⋅C	N·C

●Line driver output



Pin No. Function Cable color Brown Blue OUT A Black OUT Ā Red Shield OUT B White OUT B Grav OUT Z Orange OUT Z Yellow N·C N·C


**XN-C**: Not connected

# ※Unused wires must be insulated

XThe metal case and shield cable should be grounded(F.G.)


### Output waveform

●Totem pole output / NPN open collector output / Voltage output

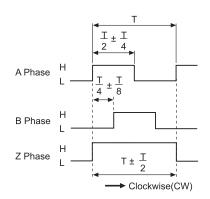

XClockwise(CW): Right turn as from the shaft

## ●Line driver output

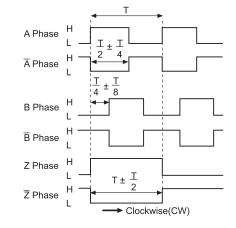

#### Caution for using

#### 1. Installation

①This unit is consisted of precision components. Therefore please treat this product carefully.

©For the installation, please check the assembly dimension of counterpart, then try not to occur the offset between shaft hole and the object. It might shorten the life cycle of the product. 3Do not put strong impact when insert coupling into shaft.

#### 2. For using

①Please connect shield wire to F.G terminal. (Encoder+Motor+Panel F.G.)

②Do not connect and cut circuit off during power on. It may result in damage to this unit.

③When the power source is a Switching Power, please install the surge absorber in power line and wire should be short in order not to be influenced by noise.

#### 3. Environment

Please do not use this unit with below environment, it results in malfunction.

①Place where this unit or component may be damaged by strong vibration or impact

②Place where there are lots of flammable or corrosive gases.

③Place where strong magnet field or electric noise are occurred.

Place where is beyond of rating temperature or humidity.

⑤Place where strong acids or alkali near by.

## 4. Vibration and Impact

①When the strong impact loads on this unit, the error pulse may occur as if the slit is revolving.

②Please fix this unit firmly when mount it in order to avoid malfunction by residual vibration.

#### 5. Wire connection

①If use the cable of encoder and high voltage line or power cable in the same conduit, it may cause a malfunction or mechanical trouble. Please wire separately or use separated conduit

②Please check wire and response frequency when extend wire because of distortion of waveform or residual voltage increment etc by line resistance or capacity between lines.

XIt may cause malfunction if above instructions are not followed.

■ Temperature controllers

SSR/Power controllers

■ Counters ■ Timers

■ Panel meters

■ Display units

■ Sensor controllers

■ Temperature/Humidity transducers

■ Tachometer/Pulse(Rate)meters

# Major products

- Fiber optic sensors Door sensors
- Door side sensors
- Area sensors Proximity sensors
- Pressure sensors
- Rotary encoders ■ Connectors/Sockets
- Switching mode power supplies
   Control switches/Lamps/Buzzers
- I/O Terminal Blocks & Cables
- Stepper motors/drivers/motion controllers
- Graphic/Logic panels■ Field network devices
- Laser marking system(Fiber, CO₂, Nd:YAG)

#### Autonics Corporation http://www.autonics.com Satisfiable Partner For Factory Automation

#### ■ HEAD QUARTERS:

18, Bansong-ro 513beon-gil, Haeundae-gu, Busan, Korea
■ OVERSEAS SALES:

- #402-404, Bucheon Techno Park, 655, Pyeongcheon-ro, Wonmi-gu, Bucheon, Gyeonggi-do, Korea TEL: 82-32-610-2730 / FAX: 82-32-329-0728
- E-mail: sales@autonics.com

EP-KE-09-0070E