
DIN W48×H48mm Compact Counter/Timer

Features

- Counting speed: 1cps/30cps/2kcps/5kcps
- Selectable voltage input (PNP) or no-voltage input (NPN)
- Input mode: Up, Down, Up/Down
- Dot for Decimal Point / Hour. Min. Second by RESET key
- Wide range of input power supply
- 100-240VAC 50/60Hz, 24VAC 50/60Hz, 24-48VDC universal
- Selectable Counter/Timer by internal DIP switch
- [Counter]
 - 20 input modes/18 output modes
- [Timer]
 - 16 output modes

Various time setting range - 5-digit model: 0.01 sec to 9999.9 hour / 4-digit model: 0.01 sec to 9999 hour

Output: Indicator, 1-stage setting

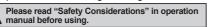



CE GRUUS

Model

Model	Display digit	Size	Output	Power supply
FX4S-1P2	9999 (4-digit)	-DIN W48×H48mm	11-stage setting	24VAC 50/60Hz, 24-48VDC
FX4S-1P4				100-240VAC 50/60Hz
FX5S-I2	99999 (5-digit)		Undicator	24VAC 50/60Hz, 24-48VDC
FX5S-I4				100-240VAC 50/60Hz

Specifications


NA . J. I	1-stage set	tting	FX4S-1P2	FX4S-1P4	<u> </u>	_	
Model	Indicator		_	_	FX5S-I2	FX5S-I4	
Display digit		4-digit		5-digit			
Character size	e (W×H)		3.8×7.6mm		4×8mm		
Power supply			24VAC~ 50/60Hz, 24-48VDC==	100-240VAC~ 50/60Hz	24VAC~ 50/60Hz, 24-48VDC==	100-240VAC~ 50/60Hz	
Permissible vo	oltage range		90 to 110% of rated voltage				
Power consun	nption		AC: Max. 3.5VA DC: Max. 2.3W	Max. 4.6VA	AC: Max. 3VA DC: Max. 1.8W	Max. 3.8VA	
Max. counting	speed of C	P1/CP2	Selectable 1cps/30cps/2kcps/5kcps (DIP switch)				
Return time			Max. 500ms				
Min. signal wid	dth		INHIBIT, RESET input: ap	prox. 20ms			
Input method			Selectable voltage input (PNP) method or no-voltage input (NPN) method [Voltage input (PNP) method]-input impedance: max. 10.8kΩ, [H]: 5-30VDC==, [L]: 0-2VDC [No-voltage input (NPN) method]-short-circuit impedance: max. 470Ω, short-circuit residual voltage: max. 1VDC, open-circuit impedance: min. 100kΩ				
One-shot outp	ut time		0.05 to 5 sec				
	Contact	Туре	Instantaneous SPDT (1c)	nstantaneous SPDT (1c) —			
Control	Contact	Capacity	250VAC∼ 3A, 30VDC=	3A resistive load	_		
output	Solid	Туре	NPN open collector: 1		_		
	state	Capacity	Max. 30VDC==, 100mA		_		
Relay	Mechanica	I	Min. 5,000,000 operations				
	Electrical		Min. 100,000 operations (250VAC 3A resistive load)				
Repeat/Set/Vol	tage/Tempe	rature error	Max. ±0.01% ±0.05 sec				
Insulation resi	stance		Over 100MΩ (at 500VDC megger)				
External power			Max. 12VDC== ±10% 50mA				
Memory reten			Approx. 10 years (non-volatile memory)				
Dielectric stre			2,000VAC 50/60Hz for 1 minute (between all terminals and case)				
	AC voltage		±2kV the square wave noise (pulse width 1µs) by the noise simulator				
immunity AC/DC voltage		±500V the square wave noise (pulse width 1µs) by the noise simulator					
Vibration	Mechanica		0.75mm amplitude at frequency 10 to 55Hz (for 1 min) in each X, Y, Z direction for 1hour				
Vibration	Malfunction	1	0.5mm amplitude at frequency 10 to 55Hz (for 1 min) in each X, Y, Z direction for 10min				
Shock	Mechanica		300m/s² (approx. 30G) in each X, Y, Z direction for 3 times				
	Malfunction		100m/s² (approx. 10G) in each X, Y, Z direction for 3 times				
I = nvironment			-10 to 55°C, storage: -25		,		
Ambient humidity		35 to 85%RH, storage: 35 to 85%RH					
Protection structure		IP20 (front part, IEC standard)					
Approval			20 ∠PR 3 ∋ 2				
Weight ^{**1}		Approx. 171g (approx. 110g) Approx. 156g (approx. 95g)					

*1: The weight includes packaging. The weight in parenthesis is for unit only. *Environment resistance is rated at no freezing or condensation.



Up/Down Counter/Timer



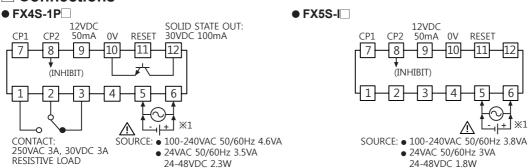

※1: AC voltage: 100-240VAC 50/60Hz 4.6VA/3.8VA

9.3

AC/DC voltage: 24VAC 50/60Hz 3.5VA/3VA, 24-48VDC 2.3W/1.8W

81.2

XINHIBIT: In case of timer mode, this terminal is for time hold.

(voltage input (PNP): connect with 12VDC, no-voltage input (NPN): connect with 0VDC)

4

Dimensions


(unit: mm) O Bracket Panel cut-out Min. 65 30. 045^{+0.6} 36 44.9 65 Min **□48.6** 45 55 56

□48

1234


Input Connection

O Voltage input (PNP) Solid state input (standard sensor: PNP output type sensor)

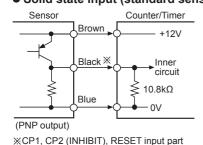

Counter/Timer Brown +12V Black Inner circuit 10.8kΩ Blue (PNP open collector output)


Contact input

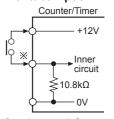


※Counting speed: Set as 1 or 30cps


No-voltage input (NPN)

Solid state input (standard sensor: NPN output type sensor)

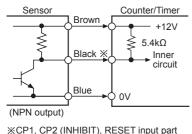

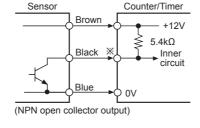

Contact input

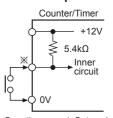

Counting speed: Set as 1 or 30cps

(A) Photoelectric Sensors

(C) Door/Area Sensors

(D) Proximity Sensors

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/Sockets

(I) SSRs / Power Controllers

(K) Timers

(M) Tacho / Speed / Pulse Meters

(N) Display Units


(P) Switching Mode Power Supplies

(Q) Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels

J-43 **Autonics**

DIP Switch Setting

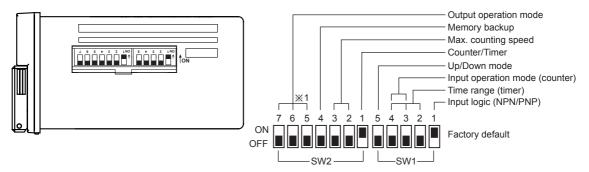

※1: Indicator model (FXS5-I□) does not have no. 5, 6, 7 of SW2.
for output operation mode setting.

● Input logic (CP1, CP2, INHIBIT, RESET input)

١,	(,,,,				
SW1		Function			
1	ON OFF	NPN (No-voltage input)			
•	ON OFF	PNP (voltage input)			

Up/Down mode

SW1		Function
5	ON OFF	Down mode
	ON OFF	Up mode

Counter/Timer

SW2		Function			
4	ON OFF	Counter mode			
1	ON OFF	Timer mode			

Memory backup

SW	2	Function
4	ON OFF	No memory backup
4	ON OFF	Memory backup

Max. counting speed

		-		
SW2	ON OFF	ON OFF	ON OFF	ON OFF
Function	1cps	30cps	2kcps	5kcps

• Time range (timer)

• Timo rango (timor)				
SW1	FX4S-1P□	FX5S-I□		
4 3 2 ON OFF	99.99sec	9999.9sec		
4 3 2 ON OFF	999.9sec	99999sec		
4 3 2 ON OFF	9999sec	9min 59.99sec		
4 3 2 ON OFF	99min 59sec	99min 59.9sec		
4 3 2 ON OFF	999.9min	9999.9min		
4 3 2 ON OFF	99hour 59min	9hour 59min 59sec		
4 3 2 ON OFF	999.9hour	999hour 59min		
4 3 2 ON OFF	9999hour	9999.9hour		

■ Error Display and Output Operation


Error Display	Error description	Troubleshooting
ErrO	Setting value is 0.	Change the setting value anything but 0.

 $[\]frak{H}\mbox{When error occurs},$ the output turns OFF.

J-44 Autonics

^{*}Indicator model does not have error display function.


Dot for Decimal Point / Hour. Min. Second

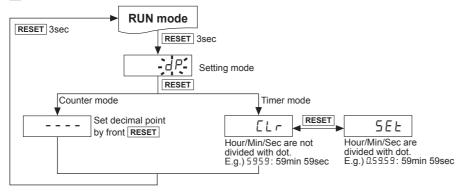

※Run mode: hold the RESET key for over 3 sec, and it enters setting mode [dP].

XSetting mode: hold the RESET key for over 3 sec, and it saves the setting and returns to RUN mode. If there is no RESET key input for 60 sec when entering setting mode, it returns to RUN mode.

Changing the decimal point

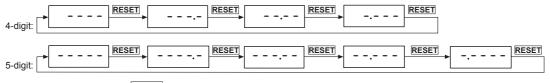


XIt returns to RUN mode if no RESET key or digital switch is applied for 60 sec in decimal point setting status.


■ Counting & Time Operation for Indicator (FX5S-I□)

© Counting operation


• Input mode: Up

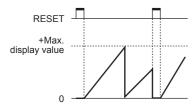


• Input mode: Up/Down-A, B, C

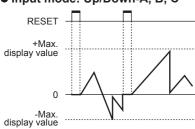


Time operation

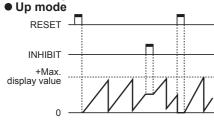


Input mode: Down

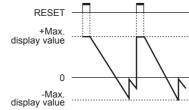

Input mode: Up/Down-D, E, F

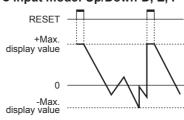



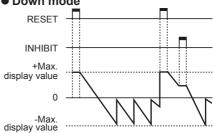

(A) Photoelectric Sensors

(C) Door/Area Sensors

(D) Proximity Sensors

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/Sockets

(I) SSRs / Powe Controllers

(K) Timers

(P) Switching Mode Powe Supplies


(Q) Stepper Motors

(R) Graphic/ Logic Panels

J-45 **Autonics**

■ Input Operation Mode (counter)


XCP: Clock Pulse

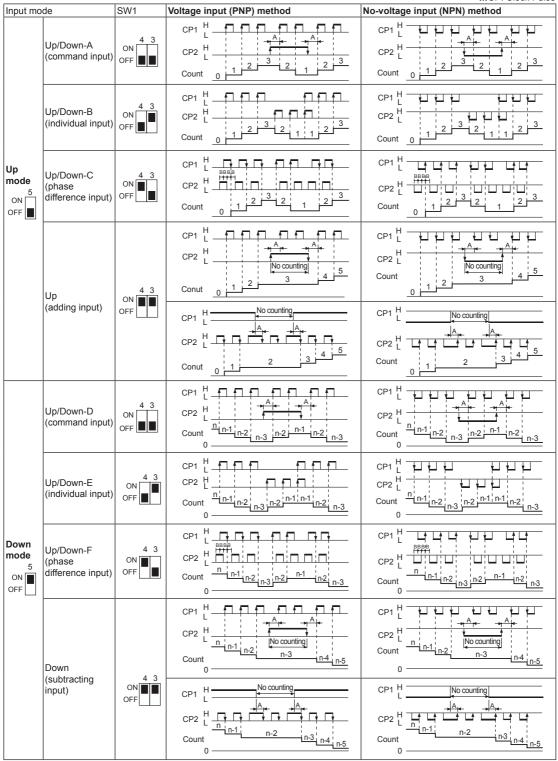

%A: over min. signal width, B: over than 1/2 of min. input signal width. If the signal is smaller than these width, it may cause counting error (±1).

J-46 Autonics

Up/Down Counter/Timer

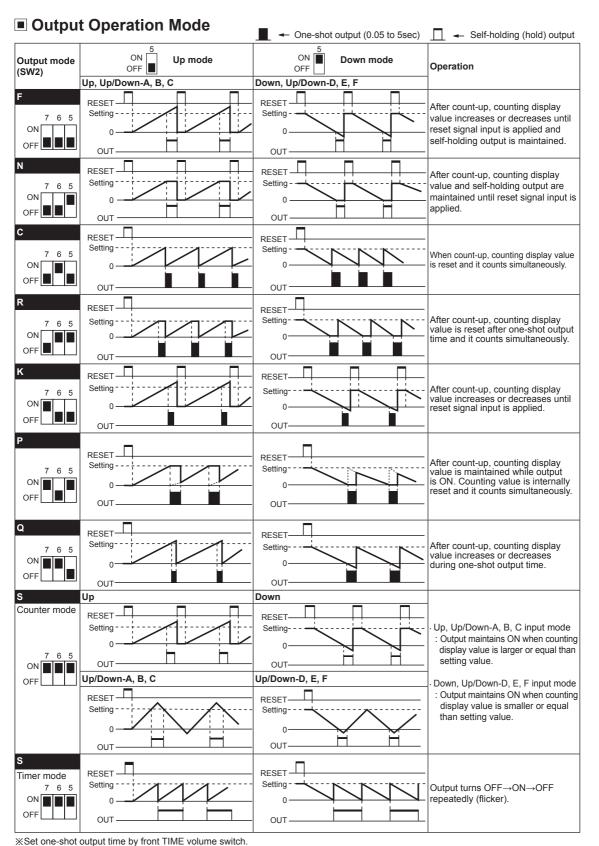

(A) Photoelectric Sensors

(B) Fiber Optic

> (C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure

Sensors

(F) Rotary Encoders

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/Sockets

(H) Temperature Controllers

(I) SSRs / Power Controllers

> J) Counters

(K) Timers

> _) anel

(M) Tacho / Speed / Pulse

olay

o)) ensor entrollers

(P) Switching Mode Power Supplies

Supplies
(Q)
Stepper Motors

& Drivers & Controllers

(R) Graphic/ Logic Panels

> ield letwork levices

T) Software

FXS Series

Proper Usage

- Follow instructions in 'Proper Usage'. Otherwise, it may cause unexpected accidents.
- 24-48VDC, 24VAC power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Use the product, 0.1 sec after supplying power.
- When supplying or turning off the power, use a switch or etc. to avoid chattering.
- Install a power switch or circuit breaker in the easily accessible place for supplying or disconnecting the power.
- In case of contact input, set count speed to low speed mode (1cps or 30cps) to operate.
 If set to high speed mode (2kcps or 5kcps), counting error occurs due to chattering.
- Keep away from high voltage lines or power lines to prevent inductive noise.
 In case installing power line and input signal line closely, use line filter or varistor at power line and shielded wire at input signal line.
- Do not use near the equipment which generates strong magnetic force or high frequency noise.
- This product may be used in the following environments.
 - ①Indoors (in the environment condition rated in 'Specifications')
 - ②Altitude max. 2,000m
 - ③Pollution degree 2
 - 4 Installation category II

J-48 Autonics