

# Autonics

## POWER CONTROLLER

### SPC SERIES

M A N U A L



Thank you very much for selecting Autonics products.  
For your safety, please read the following before using.

#### Caution for your safety

- ⚠ Please keep these instructions and review them before using this unit.
- ⚠ Please observe the cautions that follow;
- Warning** Serious injury may result if instructions are not followed.
- Caution** Product may be damaged, or injury may result if instructions are not followed.
- ⚠ The following is an explanation of the symbols used in the operation manual.
- ⚠ Caution: Injury or danger may occur under special conditions.

#### Warning

- In case of using this unit with machinery (Ex: nuclear power control, medical equipment, ship, vehicle, train, airplane, combustion apparatus, safety device, crime/disaster prevention device, etc) which may cause damages to human life or property, it is required to install fail-safe device.**  
It may cause a fire, human injury or damage to property.
- This unit must be mounted on the panel and Frame Ground (F.G.) terminal shall be grounded.**  
It may cause electric shock.
- Do not connect terminals when it is power on.**  
It may cause electric shock.
- Do not disassemble and modify this unit. Please contact us if it is required.**
- Do not touch terminals after power off.**  
It may cause electric shock.

#### Caution

- This unit shall not be used outdoors.**  
It may shorten the life cycle of the product or cause electric shock.
- Refer to the wire spec. chart for power and load connection by load current.**  
It may cause a fire.
- Tighten bolts on the terminal block with specified tightening torque.**  
Specified tightening torque -M3.5 : 0.6 to 1.2N·m(6.0 to 12.0kgf·cm)  
-M5 : 1.5 to 2.2N·m(15 to 25kgf·cm)  
It may cause a fire due to contact error.
- Please observe the rated specification.**  
It might shorten the life cycle of the product and cause a fire.
- In cleaning the unit, do not use water or an oil-based detergent.**  
It may cause electric shock or a fire.
- Do not use this unit at place where there are flammable or explosive gas, humidity, direct ray of the sun, radiant heat, vibration, impact etc.**  
It may cause explosion or a fire.
- Do not inflow dust or wire dregs into the unit.**  
It may cause a fire or mechanical trouble.
- Do not touch the heat sink while it is running.**  
It may cause a burn.
- This unit requires 1 to 3 sec. ready time to operate after supplying power.**  
At this ready time, output does not occur.

#### Ordering information

SPC	1	-	35
			35 Rated current(A)
			50 Rated current(A)
			1 Single phase
			SPC Solid state Power Controller

#### Specifications


Model	SPC1-35	SPC1-50
Power supply	220VAC 50/60Hz	
Allowable operating voltage	90 to 110% of rated voltage	
Operating frequency fluctuation	± 1Hz	
Maximum rated current	35A(Single phase)	50A(Single phase)
Control power	220VAC	
Control range	Phase control : 0 to 98%, Cycle control : 0 to 100%	
Applied load	Resistance load (Min. load: over 5% of rated current)	
Cooling method	Natural air cooling	
Control circuit	Micom control type	
Control input	1-5VDC DC4-20mA(250Ω) ON/OFF(External contact or 24VDC) External VR(1kΩ) Output limit input(Front OUT ADJ. VR)	
Control type	By selection	S/W
Starting type	SOFT START(0 to 50 sec variable)	
Display	Output indication(LED)	
Insulation resistance	100MΩ (at 500VDC megger)	
Dielectric strength	2000VAC for 1minute	
Noise	± 2kV the square wave noise(pulse width:1μs) by the noise simulator	
Vibration	Mechanical	0.75mm amplitude at frequency of 10 to 55Hz(for 1 min.) in each of X, Y, Z directions for 1hour
	Malfunction	0.5mm amplitude at frequency of 10 to 55Hz(for 1 min.) in each of X, Y, Z directions for 10min.
Shock	Mechanical	300m/s <sup>2</sup> (30G) in X, Y, Z directions for 3 times
	Malfunction	100m/s <sup>2</sup> (10G) in X, Y, Z directions for 3 times
Environment	Ambient temperature	0 to 50°C, Storage : -25 to 65°C
	Ambient humidity	35 to 85%RH
Unit Weight	Approx. 1kg	

※Environment resistance is rated at no freezing or condensation.  
※1. Refer to ■Operation and function 1. Control mode selection.


#### Factory default

Control mode	Phase control mode
Control type	Equality division type of phase according as control input
Cycle control period	0.5sec(JP1, JP2 short)
SOFT START setting	0sec
OUT ADJ. setting	100%

#### Parts description

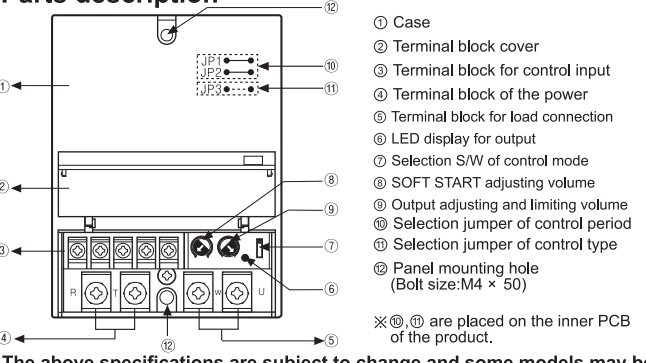

#### Operation and function

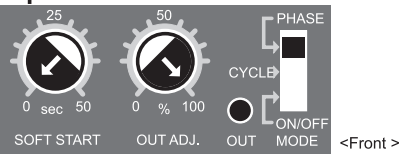


#### 1. Control mode selection

Control mode	Phase control mode	Cycle control mode (Zero Cross)	ON/OFF control mode (Zero Cross)
Mode switch	PHASE CYCLE ON/OFF	PHASE CYCLE ON/OFF	PHASE CYCLE ON/OFF

- ※ When selecting cycle control mode, the cycle has been set as 0.5sec. It can be changed to 2.0sec, 10sec by selection.
- ※ The mode cannot be changed while it is operating.
- ※ Be sure to set the proper mode after turning the power off then supply the power again.

#### 1) Phase control

It is output type to control phase of an alternating according as control input signal.

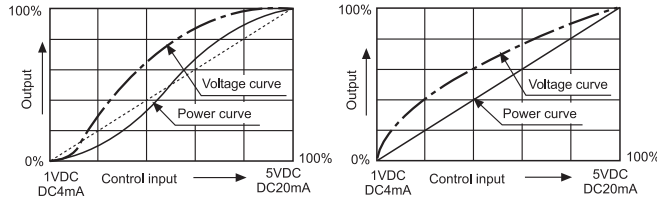

This is analog type to output control angle with dividing equally according as control input signal. It shows power characteristic as (Figure 1) and it might occur over power or lack power at point middle of control input.


It divides control angle non-equally according as control input signal (Figure 2) then make power curve linearize (Figure 2) so it becomes possible to output the power, which is proportioned by control input.

※ To change control method, please change the JP3 of the PCB as below.

JP3	Control type
SHORT	Equality division type of phase according as control input
OPEN	Equality division type of power according as control input

#### 2) Cycle control (fixed cycle)-Zero Cross

It controls the supplied power by ON/OFF cycle repetitively according to controlling input signal during set cycle (Selectable 0.5, 2, 10sec) as below. It is better for the load control linearly than phase control's and there is no ON/OFF noise because it turns ON and OFF at the zero point of AC. Usually it is used in a place or electric furnace with easily effected by external noise.

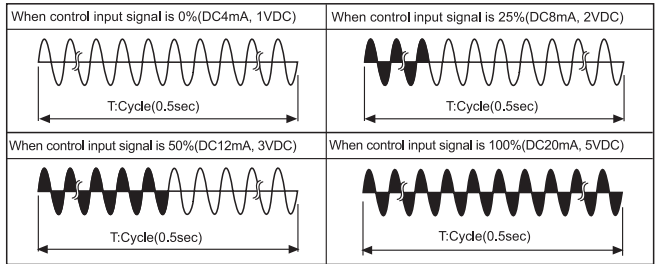


※ To change cycle, please change JP1 and JP2 of PCB as below.

JP1	JP2	Period
SHORT	SHORT	0.5sec
SHORT	OPEN	2.0sec
OPEN	SHORT	10sec
OPEN	OPEN	X(Not used)


#### 3) ON/OFF control-Zero Cross

This function is when control input is ON, output is 100%. When it is OFF, output is 0%. It is the same function as SSR(Solid State Relay). (It always turns ON/OFF at zero point of AC.) OUT ADJ and SOFT START functions are not available in ON/OFF control mode.

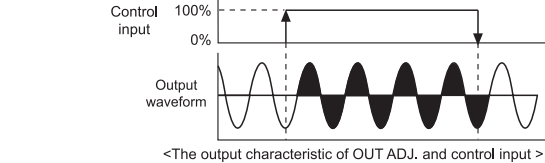

#### 2. OUT ADJ. (Output adjusting and limiting function) (0 to 100%)


This function is [Control input (%) × output limit set(%) = Output] and it controls the power supplied into the load. Although control input is 100% (5V or 20mA), if output limit (OUT ADJ.) set value is 50%, output is 50% proportionate to the output limit (OUT ADJ.) set value. When not using OUT ADJ. function, set the value as 100%.

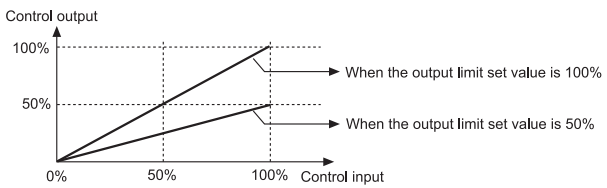

※ This function must not be used in ON/OFF control mode.

#### 3. SOFT START function(0 to 50sec)

When the power is supplied, this function is able to protect the load when it controls load (Molybdenum, White gold, infrared Lamp) with inrush current or the width of rising temperature in big(SV is big).

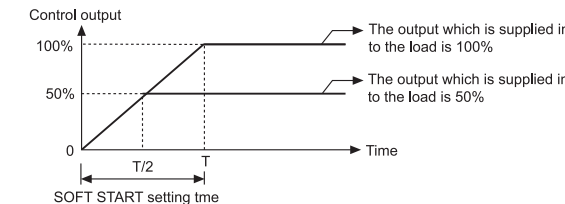


SOFT START set time (T) is the required time that output reaches to 100%, and it is differentiated by OUT ADJ. set value. For example, SOFT START is set as 10sec and OUT ADJ. is set as 70%, it takes 7sec. to reach goal output.  
[Set time (T) × OUT ADJ. set value (%) = 10sec × 0.7 = 7sec]  
If increasing the OUT ADJ. before output reaches to goal output, it delays as much as the value, multiply of increased value (%) and SOFT START set time.  
When not using SOFT START function, set the value as 0.  
※ This function must not be used in ON/OFF control mode.

#### 4. OUT display function


This is LED lamp to display the status of output and will be getting brighter according as output. (0%:Min. LED light, 100%:Max. LED light)

#### Dimensions

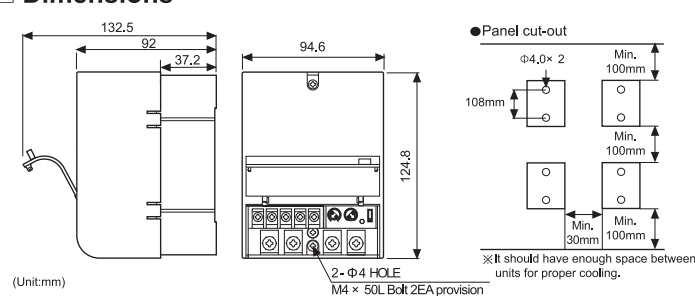

#### Connection

##### 1. External connection

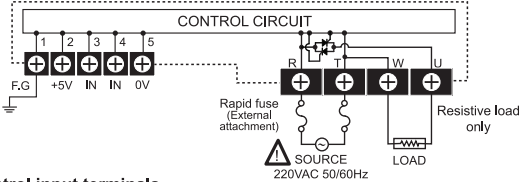


##### 2. Connection of control input terminals

- DC4-20mA control input**  
It controls 0 to 100% to supply DC 4 to 20mA on Ⓜ, Ⓝ terminals when power is supplied.  
Sensor and every controlling equipment  
4-20mADC  
Ⓜ Ⓝ  
※ This function must not be used in ON/OFF control mode.
- 1-5VDC control input**  
It controls 0 to 100% to supply 1 to 5VDC on Ⓜ, Ⓝ terminals when power is supplied.  
Sensor and every controlling equipment  
1-5VDC  
Ⓜ Ⓝ  
※ This function must not be used in ON/OFF control mode.
- External contact control input**  
It controls 100% to connect external S/W or relay contact to Ⓜ, Ⓝ terminal when it is ON, it controls 0% when it is OFF.  
External S/W or relay contact  
Ⓜ Ⓝ  
※ It is available for all control modes. OUT ADJ and SOFT START functions are not available in ON/OFF control mode.
- External volume control input**  
It controls 0 to 100% with turning VR to connect 1kΩ to Ⓜ, Ⓝ, Ⓝ terminals when power is supplied, or after connecting Ⓜ terminal to Ⓝ terminal, it is possible to control 0 to 100% with turning OUT ADJ. <See Ex2 of ■Application>  
OUT ADJ will be operated in state of above 1), 2), 3). Set at 100% when it is not used.  
External volume 1kΩ  
Ⓜ Ⓝ Ⓝ  
※ This function must not be used in ON/OFF control mode.
- External 24VDC control input**  
It is possible to connect as below with 24VDC in ON/OFF control mode.  
24VDC  
Ⓜ Ⓝ Ⓝ  
※ It is available for all control modes. OUT ADJ and SOFT START functions are not available in ON/OFF control mode.  
When supplying 24VDC, the output is 100%. When 24VDC is not supplied, the output is 0%. Therefore ON/OFF control is available.

#### Application


Ex1) When controlling by limiting the power at ON/OFF in phase control and cycle control mode. For example, if it needs to control 80% output when it is ON, 24% output when it is OFF, please keep below.

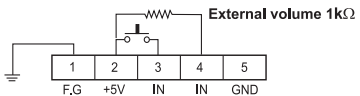

Firstly set OUT ADJ. as 80% and connect external volume and external relay contact S/W as above picture then set external volume as 30%.

- When the External contact signal is ON : 100%(contact input) × 80%(OUT ADJ.) = 80%
- When the External contact signal is OFF : 30%(volume input) × 80%(OUT ADJ.) = 24%

Ex2) This is how to control 0 to 100% without external volume in phase control mode and cycle control mode. It is possible to control 0 to 100% with turning OUT ADJ. in state of connecting terminal 2 and terminal 3.

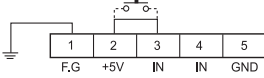


#### Control input specification and function for each mode

● Please see <Connection of control input terminals> and above function.


Mode	Phase control mode	Cycle control mode	ON/OFF control mode
Input and function			
Control input specification	DC4-20mA		External contact or 24VDC
	1-5VDC		
	External contact, 24VDC		
Function	External volume		OUT display
	OUT ADJ.		
	SOFT START		
	OUT display		

#### Temperature derating curve

##### 1. SPC1-35

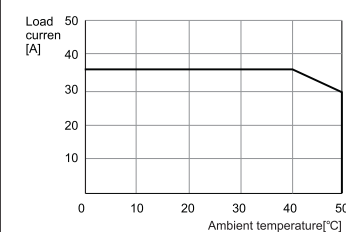

##### 2. SPC1-50

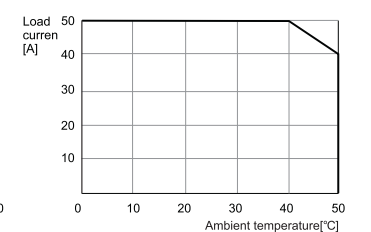

#### Caution for using

- Installation environment  
① It shall be used indoor Ⓜ Altitude Max. 2000m  
② Pollution Degree 2 Ⓝ Installation Category II
- Do not use this unit at below places.  
① Place where there are severe vibration or impact.  
② Place where there are direct ray of the sun  
③ Place where strong magnetic field or electric noise are generated.
- When test dielectric voltage and insulation resistance of the control panel with this unit installed.  
① Remove this unit from the circuit of control panel.  
② Make all terminals of this unit short-circuited.
- When installing it on the panel, it should be installed vertically at the place which is well ventilation. If install it horizontally, under 70% of rated current should be supplied.
- The rapid fuse must be installed between the terminal of R and the power.  
① The inductive load cannot be used because this is for resistive load only.
- Be sure to set the proper mode after turning the power off then supply the power again.  
Be sure that if OUT ADJ. setting is 0%, it does not operate.  
The mode cannot be changed while it is operating. Be sure to set the proper mode after turning the power off then supply the power again.
- Case detachment  
Turn off the power before detaching the case.  
① Widen lock device toward the outside with a driver.  
② Pull up the case and separate it.

※ Be careful to use machine tools, it may cause an injury.

※ It may cause malfunction if above instructions are not followed.

AWG No.	Area(mm <sup>2</sup> )	Applicable current(A)
16	1.3mm <sup>2</sup>	Max. 10A
14	2.1mm <sup>2</sup>	Max. 15A
12	3.3mm <sup>2</sup>	Max. 20A
10	5.3mm <sup>2</sup>	Max. 30A
8	8.4mm <sup>2</sup>	Max. 40A
6	13.3mm <sup>2</sup>	Max. 55A

#### Major products

- Photoelectric sensors
- Fiber optic sensors
- Door sensors
- Door side sensors
- Area sensors
- Proximity sensors
- Pressure sensors
- Rotary encoders
- Connector/sockets
- Switching mode power supplies
- Control switches/Lamps/Buzzers
- I/O Terminal Blocks & Cables
- Stepper motors/drivers/motion controllers
- Graphic/Logic panels
- Field network devices
- Laser marking system(Fiber, CO<sub>2</sub>, Nd:YAG)
- Laser welding/soldering system
- Temperature controllers
- Temperature/Humidity transducers
- SSR/Power controllers
- Counters
- Timers
- Panel meters
- Tachometer/Pulse(Rate)meters
- Display units
- Sensor controllers

**Autonics corporation**  
http://www.autonics.com

Satisfiable Partner For Factory Automation

HEAD QUARTERS:  
18, Bansong-ro 513beon-gil, Haendae-gu, Busan, Korea  
OVERSEAS SALES:  
#402-404, Bucheon Techno Park, 655, Pyeongcheon-ro, Wonmi-gu, Bucheon, Gyeonggi-do, Korea  
TEL: 82-32-610-2730 / FAX: 82-32-329-0728  
E-mail: sales@autonics.com