Autonics

INTELLIGENT DISPLAY UNIT (Parallel Input)

DS/DA-P Series

INSTRUCTION MANUAL





Thank you for choosing our Autonics products. Please read the following safety considerations before use.

Safety Considerations

XPlease observe all safety considerations for safe and proper product operation to avoid hazards. XSafety considerations are categorized as follows

Marning Failure to follow these instructions may result in serious injury or death. **∆Caution** Failure to follow these instructions may result in personal injury or product damage.

XThe symbols used on the product and instruction manual represent the following ▲ symbol represents caution due to special circumstances in which hazards may occur

⚠ Warning

1. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.) Failure to follow this instruction may result in personal injury, fire, or economic loss

2. Do not disassemble or modify the unit. Please contact us if necessary. Failure to follow this instruction may result in fire.

⚠ Caution

Do not use the unit outdoors.

- Failure to follow this instruction may result in shortening the life cycle of the unit or product malfunction.
- Use the unit within the rated specifications.
 Failure to follow this instruction may result in shortening the life cycle of the unit.
- 3. Do not use water or oil-based detergent when cleaning the unit. Use dry cloth to clean the unit. Failure to follow this instruction may result in fire.
- 4. Do not use the unit where flammable or explosive gas, humidity, direct sunlight, radiant heat, vibration, or impact may be present.
- Failure to follow this instruction may result in fire or explosion. 5. Keep dust and wire residue from flowing into the unit.
- Failure to follow this instruction may result in fire or product damage

Model 1) Basic unit


| Model | Display method | Size | Model | Display method | Size | | | | |
|-------------------|----------------|-----------------------------------|---------|----------------|-----------|--|--|--|--|
| DS22-□P | | W20×H33mm DA22- □ P | | | W20×H33mm | | | | |
| DS40P | 7 Segment | W40×H60mm | DA40-□P | 16 Segment | W40×H60mm | | | | |
| DS60P | | W60×H96mm DA60-□P | | | W60×H96mm | | | | |
| 2) Expansion unit | | | | | | | | | |
| Model | Display method | Size | Model | Display method | Size | | | | |

| z) Expansion unit | | | | | | | | | | |
|-------------------|----------------|-----------|---------|----------------|-----------|--|--|--|--|--|
| Model | Display method | Size | Model | Display method | Size | | | | | |
| DS22-□E | | W20×H33mm | DA22-□E | | W20×H33mm | | | | | |
| DS40-□E | 7 Segment | W40×H60mm | DA40-□E | 16 Segment | W40×H60mm | | | | | |
| DS60-DE | | W60×H96mm | DA60-□E | | W60×H96mm | | | | | |

※□ indicates color: R(Red), G(Green)


Connection Of Units


- Connect a basic unit, expansion units, a unit-display unit from the left and connect the caps the end of right and left.
- •The middle bracket (sold separately) helps to protect deflection when connecting over 7 units. Use one middle bracket per 7 units. The basic unit supplies the power for expansion
- units and the unit-display unit and DATA input.

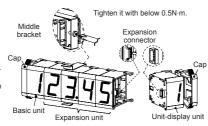

2) D 40/D 60

Connect expansion connectors of units using a ribbon cable (accessory) as (figure 1). If the distance between expansion units is far as (figure 2), you can connect the cable at the soldering pad. To use a soldering pad, remove the protection cover which only expansion units have.

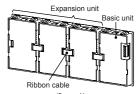

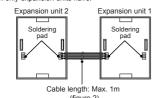


Flat-head

(figure 2) XYou can use both the 7 segment display method model and the 16 segment display method model mixed.

Remove Of Protection Cover

To operate the function set switch of the DT40, DT60 models. you should remove the protection cover.

Press the connection parts (4 points) of the protection cover at the top/bottom of the product with a flat-head screwdriver and the protection cover is removed.

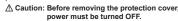



Specifications


| Model | Basic unit | D□22-□P | D□40-□P | D□60-□P | | | | | | | |
|--|----------------|--|---------------------------|---------------------------|--|--|--|--|--|--|--|
| iviouei | Expansion unit | D 22- E | D□60-□E | | | | | | | | |
| Input metho | od | Parallel (Dynamic Parallel 1, Dynamic Parallel 2) | | | | | | | | | |
| Display col | or | Red, Green (selectable by | model) | | | | | | | | |
| Power supp | oly | 12-24VDC | | | | | | | | | |
| Allowable v | oltage range | 90 to 110% of rated voltage | | | | | | | | | |
| Current Red type | | Max. 25mA | Max. 55mA | Max. 65mA | | | | | | | |
| consumption | Green type | Max. 20mA | Max. 40mA | Max. 45mA | | | | | | | |
| Character s | size | W11.2×H22.5mm | W22.4×H40mm | W33.6×H60mm | | | | | | | |
| Max. clock ³ | K1 | Dynamic Parallel 1: Max. 3kHz Dynamic Parallel 2: Max. 1.5kHz | | | | | | | | | |
| Input logic | | Selectable positive logic (PNP), negative logic (NPN) (change by function set switch | | | | | | | | | |
| Input resist | ance | 20kΩ | | | | | | | | | |
| Input level | | High: 4.5-24VDC, Low: 0-1.2VDC | | | | | | | | | |
| Display cha | racter | Displays 64 types of character and sign (0 to 9, A to Z, 27 signs, dot) | | | | | | | | | |
| The number of max. multi-stage connection | | Dynamic Parallel 1: 6 units (4-bit), 4 units (6-bit) Dynamic Parallel 2: 24 units (6-bit) | | | | | | | | | |
| Noise resis | tance | ±500V the square wave noise (pulse width: 1µs) by the noise simulator | | | | | | | | | |
| Environ- | Ambient temp. | -10 to 55°C, storage: -25 to 65°C | | | | | | | | | |
| ment | Ambient humi. | 35 to 85%RH, storage: 35 to 85%RH | | | | | | | | | |
| Accessory | Basic unit | Right/Left cap: 1 Connector: 1 | Connector: 1 | | | | | | | | |
| | Expansion unit | _ | Ribbon cable (50mm): 1 | | | | | | | | |
| Protection structure | | IP40 (front part) | | | | | | | | | |
| Approval | | CE | | | | | | | | | |
| Majaht ^{%2} | Basic unit | Approx. 58g (approx. 17g) | Approx. 63g (approx. 28g) | Approx. 110g (approx. 60g | | | | | | | |
| Weight ^{x2} | Expansion unit | Approx. 92q (approx. 17q)**3 Approx. 63q (approx. 28q) Approx. 110q (approx. | | | | | | | | | |


- **2: The weight includes packaging. The weight in parentheses is for unit only.
 **3: This is 3 units' weight as packaging unit and the weight in parentheses is only unit weight.
 **Environment resistance is rated at no freezing or condensation.


Dimensions





2) DS40/DA40

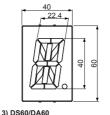

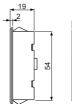

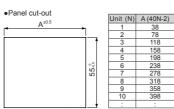

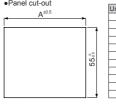


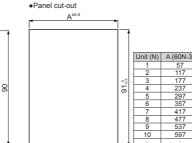

4) Accessory

Connector



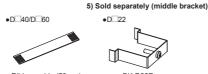





Unit-display Unit

This unit is for displaying unit by inserting a name plate. It has only 22 sizes. (sold separately) 1) Unit name plate type

| Model | | |
|-------------------------|--------|--------|
| Size | Red | Green |
| 22mm | DU22-R | DU22-G |

It provides unit-printed name plates as an accessory. You can select the desired unit name plate and insert this plate. (Single-stage unit name plate: 19 types, Dual-stage unit name plate: 2 types)






2) Unit name plate insertion Remove the protection sheet and insert the unit name plate at between the cas and the reflector **∧** Caution: Be sure about

the correct insert direction



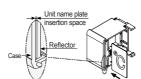

■ Part Descriptions And Function Setting

Only the basic unit model has the function set switch and the input terminal.

@Function set switches

♠Expansion connector Using for connecting units. Refer to ' Connection Of Units'.

•D□40-□F

\$1 1 0 0 \$222 0 0 \$333 0 0 \$440 0

(unit: mm)


14 13





| No. | Switch | Function | | | | |
|------|------------------|--------------------------|-----------------------|--|--|--|
| INO. | OFF(I) | ON(■) | Function | | | |
| S1 | Pos. logic (PNP) | Neg. logic (NPN) | Input logic | | | |
| S2 | Not used | Used | Zero Blanking | | | |
| S3 | 6-bit | 4-bit ^{**1,**2} | Data input bit | | | |
| S4 | Dynamic 1 | Dynamic 2 | Dynamic 1/2 selection | | | |
| J1 | ‡ | | All Zero Blanking*3 | | | |


- %1: 4-bit data input is compatible with Autonics pulse meter (MP5Y, MP5W) and panel meter (MT4Y, MT4W).
- %2: 4-bit data input displays "-" or "-1" when dot display data at the
- (Minus display function is available when Zero Blanking, or All Zero Blanking is set as ON

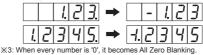

E.g.) When displaying 000045 using two basic units



3Input terminals

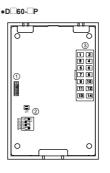

| | Dynar | mic Parallel 1 | Dynamic Parallel 2*1 | | | | |
|-----|---------|---------------------|----------------------|---------------------|------------------|---------------------|--|
| No. | 4-bit c | data input | 6-bit d | ata input | 6-bit data input | | |
| | Code | Function | Code | Function | Code | Function | |
| 1 | VCC | 12-24VDC | VCC | 12-24VDC | VCC | 12-24VDC | |
| 2 | GND | 0V | GND | 0V | GND | 0V | |
| 3 | LE5 | LATCH 5 | LE3 | LATCH 3 | LATCH | LATCH input | |
| 4 | LE4 | LATCH 4 | LE2 | LATCH 2 | CLOCK | CLOCK input | |
| 5 | LE3 | LATCH 3 | LE1 | LATCH 1 | - | - | |
| 6 | LE2 | LATCH 2 | LE0 | LATCH 0 | UNIT | Unit | |
| 7 | LE1 | LATCH 1 | DP | Decimal point | DP | Decimal poin | |
| 8 | LE0 | LATCH 0 | D5 | 2 ⁵ data | D5 | 2 ⁵ data | |
| 9 | DP | Decimal point | D4 | 2 ⁴ data | D4 | 2 ⁴ data | |
| 10 | D3 | 2 ³ data | D3 | 2 ³ data | D3 | 2 ³ data | |
| 11 | D2 | 2º data | D2 | 2º data | D2 | 2º data | |
| 12 | D1 | 2 ¹ data | D1 | 2 ¹ data | D1 | 2 ¹ data | |
| 13 | D0 | 2º data | D0 | 2º data | D0 | 2º data | |
| 14 | GND | 0V | GND | 0V | GND | 0V | |
| | | | | | | | |

X1: When selecting Dynamic Parallel 2, 6-bit data input, All Zero

**This chart is for positive logic (PNP).

Input DATA Chart

When selecting 4-bit data input, it displays only shaded part (0 to 9, A to F). If there is no input data after supplying the power, the basic unit displays 'P'.

| | DS Series (7 Segment) | | | | | | | | | | | | | (unit) | ies | High | 4-bit | | | | | | |
|---|-----------------------|--------|----|-----|----|----------|-----|-----------------------------|-----|----------------|----------|----------------|----|----------------------|----------|----------------------|-----------------|---------|----|----|----|----|---|
| t | D5 | D4 | D5 | D4 | D5 | D4 | D5 | D4 | D5 | D4 | D5 | D4 | D5 | D4 | D5 | D4 | D5 | D4 | D3 | D2 | D1 | D0 | П |
| Ì | | | 1 | H | H | , w | H | Н 7 1 1 | |] 0 | N. | H G | H | | H | <u>н</u> 7 1 1 | X No un | it | L | L | L | L | |
| | B | 1 1 | 8 | | 2 | | 1 | 3 | 22 | 1 1 | N. | 7 H | N | 7 | N | 7 7 1 | OFF | -Lower | L | L | L | Н | |
| | 2 | 2 | E | | 1 | | | } | Č. | 2 | <u> </u> | 1 1 | N | | N | 7 y . | Upper ON | -Lower | L | L | Н | L | |
| | | 3 | | | 1 |]] z | ĺ | 7 | N/A |) 3 | E E | | N |) V z | N | | Uppei | ON | L | L | Н | Н | |
| | Ч | 1 4 | 8 | K | 8 | | 8 | 7. | | 1 4 | 25 | K | N | 7 7 ₋₁ | <u>N</u> | 7 7 ; | Lower | ON | L | Н | L | L | |
| | 5 | 5 | E |) L | 6 |] (| Z | 3 ₩ | C | | N | J L | N | <u> </u> | N | 7 < | Upper flashe | -Lower | L | Н | L | Н | |
| | 8 | 6 | 8 | М | 6 | 7 | Ł | H (h) | 8 | _ | N. | I _M | N | <u> </u> | N. | | Upper flashe | r :S | L | Н | Н | L | |
| Ī | H | 7 | 8 | N | 1 | }. | ĺ | | | 7 | N. | J N | N | ý . | N | | Lower | | L | Н | Н | Н | |
| | 8 | 8 | 8 | 0 | 2 | 7. | | 7 , | 8 |) 8 | E E | 0 | N | 7 9 - | | 7 7 : | | | Н | L | L | L | |
| | 9 | 9 | 8 | P | 1 | , | 8 | I _K | C |] 9 | N. | I P | N | 7 | N. | 1 1@ | | | Н | L | L | Н | |
| | R |) A | 8 | Q | 8 | | 8 | K | ۶ | l A | 215 | l Q | 27 | 7 | ŽŽ. | 7 9 # | | | Н | L | Н | L | |
| | b | В | 8 | R | 8 | 7, | E | I | Ī |) B | Z. | 7 R | N | 7 | E E |] \$ | | | Н | L | Н | Н | |
| | 1 | С | 8 | s | 8 | 7 | _ |] 。 | [| С | N | s | 2 | 7 ? | | 3 _% | | (1 | Н | Н | L | L | |
| | d | D | 8 | | 1 | 7. | E | J _T | 1 |] _D | <u> </u> | 1 | N | | N |]] & | | | Н | Н | L | Н | |
| | E | | 8 | 1 | 8 | 7_ | - 1 | X | E | | N. | j u | N | | |) * | | | Н | Н | Н | L | |
| Ī | ۶ | | | 1 | | | | ank | ۶ | | 215 | | N | | Bla | | | | Н | Н | Н | Н | |

%1: If this data is not for the unit-display unit, it maintains former state.







Data Input Method


| П | Example or | f unit o | rganization by data input | | | | |
|---|--------------------------------|---|--|--|--|--|--|
| | Dynamic | 4-bit | Connectable 1 basic unit and 5 expansion units (6 digits) E.g.) 10 digits organization: (1 basic unit + 5 expansion units) + (1 basic unit + 3 expansion units) | | | | |
| | Parallel 1 | 6-bit Connectable 1 basic unit and 3 expansion units (4 digits) E.g.) 10 digits organization: (1 basic unit + 3 expansion units) × 2 + (1 basic unit + 1 expan | | | | | |
| | Dynamic Parallel 2 | 6-bit | Connectable 1 basic unit and 23 expansion units (24 digits) E.g.) 30 digits organization: (1 basic unit + 23 expansion units) + (1 basic unit + 5 expansion units) | | | | |
| | | | | | | | |

1) 4-bit Dynamic Parallel 1 input (E.g.: Displays ACE007.)

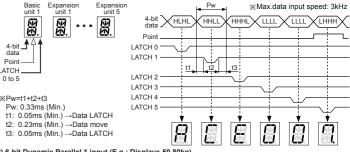

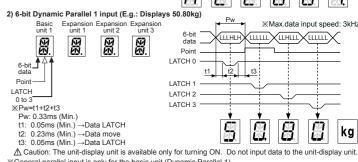

※General parallel input is only for the basic unit (Dynamic Parallel 1). Basic unit 1 Basic unit 1 Basic unit 1 Basic unit 1 4/6-bit data 3+ Point 3 Data 3 + point 3

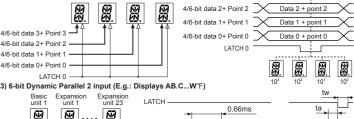

器

Unit ---CLOCK-1022 ۱°F xta: 0.3ms (Min.), tw: 0.33ms (Min.) Clock: Max. 1.5kHz

Cautions During Use

 This unit must be mounted on the Panel.
 This is non-insulated product. Use insulated power for power supply. 3. Input signal line

OShorten the cable distance between the external device and this product.
 Use shield cable when input wiring is long.
 Wire the input signal line separately from the power line.

4. Dielectric or insulation resistance test when this unit is installed in the control panel

Separate the unit from the control panel.

Short circuit all terminals of the unit.

Do not use this unit at below places.

Place where there are severe vibration or impact.

Place where strong alkalis or acids are used. 3Place where there are direct ray of the sun.

4 Place where strong magnetic field or electric noise are generated. Installation environment
 It shall be used indoor @Altitude max. 2,000m

*Failure to follow these instructions may result in product damage

■ Major Products

3 Pollution degree 2

■ Photoelectric Sensors ■ Temperature Controllers
■ Fiber Optic Sensors ■ Temperature/Humidity Transducers
■ Door Sensors ■ SSRs/Power Controllers

■ Door Side Sensors ■ Counters ■ Area Sensors■ Proximity Sensors ■ Timers
■ Panel Meters

Pressure Sensors

Rotary Encoders

Connector/Sockets

Partiel Meters

Tachometers/Pulse (Rate) Meters

Display Units
Sensor Controllers

■ Switching Mode Power Supplies ■ Control Switches/Lamps/Buzzers

| I/O Terminal Blocks & Cables |
| I/O Terminal Blocks & Cables |
| Stepper Motors/Drivers/Motion Controlle |
| Graphic/Logic Panels |

■ Field Network Devices ■ Laser Marking System (Fiber, Co₂, Nd:YAG)
■ Laser Welding/Cutting System

Topic State State

■ HEADQUARTERS:

Autonics Corporation

Trusted Partner In Industrial Automation

EP-KE-13-036