Sensor Distribution Box (M12 4-Pin/5-Pin Connector Type) Line-up Features M12 4-pin M12 5-pin • Easy check operation by operation indicator (red/green) connector type connector type • Single power operates several sensors · Convenient wiring and power line • IP67 protection structure with water-proof cover (IP52 protection structure with protection cover) • Supports 1-signal, 2-signal (DC 4-wire) Cable type Please read "Safety considerations" in operation manual before using. Cable type Connector type M12 5-pin connector type Spring terminal type Pluggable screw terminal type Ordering Information 3D 5 Cable type Pluggable screw terminal type - Cable length - Hood cover M12 4-pin No mark 5m No mark Including hood cover connector M12 5-pin 5m No hood cover connector 10 10m ...!!.... No. of M12 connector pins No mark 4-pin (yellow) and case color 5 5-pin (blue)

5K

N

Р

2D

3D

4D

С

s

Р

6

8

PT

No mark

5-pin (black)

NPN type

PNP type

Cable type

4-port

6-port

8-port

Connector type

DC 2-wire (1-signal)

DC 3-wire (1-signal)

DC 4-wire (2-signal)

Spring terminal type

Sensor distribution box

Pluggable screw terminal type

※1: It is not applied for DC 2-wire (1-signal) type of output.

Output type

Connection method

for external signal

Number of ports


Item

※2: Only for cable type and connector type of M12 5-pin connector type.

Input logic^{*1}

*3: Only for spring terminal type, pluggable screw terminal type of M12 5-pin connector type.

■ Terminal Specifications For Spring/Pluggable Screw Terminal Type



(unit: mm)

		A	В	С	Applicable wire
End Sleeve	Spring terminal type	8			Signal line: AWG22 (0.30mm²)
I'm a market	Pluggable screw terminal type	8 to 10	1.3 tot 1.7	13 /1 to 3 8	Power line: AWG17 (1mm²)

G-12 Autonics

Specifications

N 41 - 1	NPN type	PT4-2D	PT4-3DN	PT6-2D	PT6-3DN	PT8-2D	PT8-3DN				
Model	PNP type	_	PT4-3DP	-	PT6-3DP	1—	PT8-3DP				
Port		4-port		6-port		8-port					
Output type ^{*1}		2-wire (1-signal),	3-wire (1-signal)	2-wire (1-signal),	3-wire (1-signal)	2-wire (1-signal),	3-wire (1-signal)				
Power supply	12-24VDC (10-30VDC)										
Rated current 2A (per signal), 4A (per port), 10A (total)											
Leakage curre	nt	Max. 0.5mA									
Connection life	cycle	Min. 200 operations									
Insulation resis	tance	Over 50MΩ (at 500VI	OC megger)								
Dielectric stren	gth	1,500VAC 50/60Hz fo	r 1 min								
Vibration		1mm amplitude at fre	quency of 10 to 55Hz	(for 1 min) in each X,	Y, Z direction for 2 hou	rs					
Shock		500m/s² (approx. 500	in each X, Y, Z direct	ction for 3 times							
Indicator		Power indicator: Green LED, Operation indicator: Red LED									
Environment	Ambient temp.	-25 to 75, storage: -30) to 80								
Liviloiiiieiit	Ambient humi.	35 to 95%RH, storage	e: 35 to 95%RH								
Protection stru	cture ^{*2}	IP67 (IEC standard/w	hen mounting connec	tor, waterproof cover)	or IP52 (IEC standard/	when mounting protect	ction cover)				
Material		Case: Polybutylene te	erephthalate (G15%),	General cable (gray):	Polyvinyl chloride (PV0	C)					
Approval		C€									
Weight ^{*3, *4}		Approx. 700g (approx	. 660g)	Approx. 720g (approx	x. 680g)	Approx. 820g (appro	x. 780g)				

- $\frak{\%}1$: Connect the sensor to the proper output type.
- X1: Officet in School in English of Super Specific School in English of Specific Specific

- *Environment resistance is rated at no freezing or condensation.

Туре		Cable	type					Conne	ctor ty	pe				Spring type ^{*1}					
	NPN type	1	PT4- 4DN5 -		PT6- 4DN5 -		PT8- 4DN5 -		PT4- C4DN5	PT6- C3DN5	PT6- C4DN5				PT6- S3DN	PT8- S3DN	PT4- P3DN	PT6- P3DN	PT8- P3DN□ -□
Model	PNP type	PT4- 3DP5 -	PT4- 4DP5 -	PT6- 3DP5 -	PT6- 4DP5 -		PT8- 4DP5 -	PT4- C3DP5	PT4- C4DP5	PT6- C3DP5	PT6- C4DP5				PT6- S3DP	PT8- S3DP	PT4- P3DP	PT6- P3DP	PT8- P3DP□ -□
Port	*	4-port		6-port		8-port		4-port		6-port		8-port		4-port	6-port	8-port	4-port	6-port	8-port
Output type [*]	€2	3-wire 4-wire 4-w																	
Power suppl		_	/DC (10																
Rated currer), 4A (p	er port)	, 10A (to	otal)							2A (pe	r signal), 2A (p	er port)	, 7A (to	tal)
Leakage cur			Max. 0.5mA																
Current cons	sumption	Max. 5	Max. 5mA																
Connection I	ife cycle	Min. 20	Min. 200 operations																
Insulation res	sistance	Over 1	Over 100MΩ (at 500VDC megger)																
Dielectric str	ength	500VA	C 50/60	Hz for	1 min														
Vibration											, Z dire	ction fo	r 2 houi	rs					
Shock		500m/s	s² (appr	ox. 500	3) in ea	ch X, Y,	Z direc	tion for	3 times										
Indicator		Power	indicate	or: Red	LED, C	peratio	n indica	tor: Gre	en LED)									
Environment	Ambient temp. Ambient humi.	+	75, stor 5%RH.			85%RH													
Protection st	ructure*3	IP67 (I	EC star	ndard/w	hen mo	unting	connect	tor, wate	erproof	cover)	or IP52	(IEC sta	andard/	when m	nounting	protec	tion cov	/er)	
Material		IP67 (IEC standard/when mounting connector, waterproof cover) or IP52 (IEC standard/when mounting protection cover) Case: Polybutylene terephthalate (G15%), Name plate: Polycarbonate, General cable (black): Polyvinyl chloride (PVC) Cover: Polybutylene terephthalate (G15%)							,.										
Approval		CE																	
Weight ^{※4, ※5}		Approx. 1100g	Approx. 1400g (approx. 1200g)	Approx. 1130g (approx. 930g)	Approx. 1430g (approx. 1230g)	1160g	1460g	Approx. 230g (approx. 120g)	Approx. 235g (approx. 125g)	Approx. 260g (approx. 150g)	Approx. 265g (approx. 155g)	Approx. 290g (approx. 180g)	295g	270g	Approx. 292g (approx. 165g)	Approx. 314g (approx. 190g)	Approx. 280g (approx. 150g)	302g	Approx. 334g (approx. 210g)

- X1: Applicable cable out diameter is 10.5mm±0.3 for Spring/Pluggable screw terminal type.
- ※2: Connect the sensor to the proper output type.
- *3: This is not applicable when connectors and protection/waterproof covers are not mounted
- *4: The weight includes packaging. The weight in parenthesis is for unit only.
- %5: Cable type weights are based on 5m cable.
- XEnvironment resistance is rated at no freezing or condensation.

(A) Photoelectric Sensors

(C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure Sensors

(I) SSRs / Power Controllers

(J) Counters

(M) Tacho / Speed / Pulse Meters (N) Display Units

(O) Sensor Controllers

(P) Switching Mode Power Supplies

(Q) Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels


G-13 **Autonics**

Dimensions

%The below dimensions are based on 8-port.

O Cable type


• M12 4-pin connector type

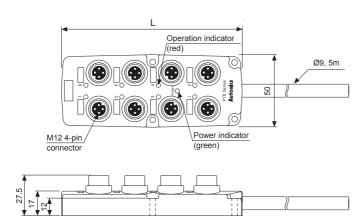

Model	L
PT4-□ □	73
PT6-□ □	98
PT8-	123


«Cable specification: Ø9, 10-wire (conductor cross section: 0.3mm², insulator diameter: Ø1.67) (unit: mm)

Panel cut-out




*Mounting holes are same as 4, 6, 8-port.

• M12 5-pin connector type

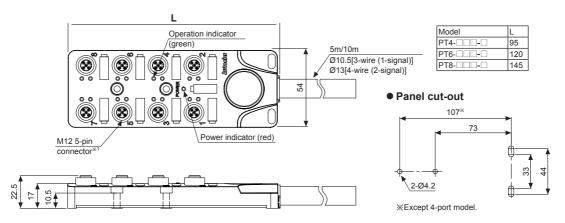


×1: When connecting L type connectors, connection direction may be different by the manufacturers of the connector.

Connector type

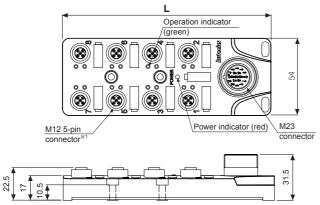

Model	L
PT4-C	95
PT6-C□□□	120
PT8-C	145

Panel cut-out




G-14 Autonics

Dimensions

XThe below dimensions are based on 8-port.


Spring terminal type/Pluggable screw terminal type

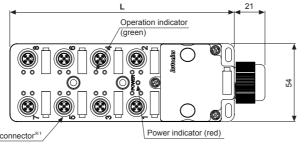

	M12 5-pin connector*1	Power indicator (red)
48.7	22 1 22 22	

Model	L
PT4-S□□□	105
PT4-P	103
PT6-S□□□	130
PT6-P	130
PT8-S□□□	155
PT8-P□□□-□	100

Panel cut-out




x 1: When connecting L type connectors, connection direction may be different by the manufacturers of the connector.


Inner Connections For Spring/Pluggable Screw Terminal Type

O Spring terminal type


● PT4-S3D

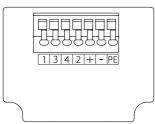

● PT6-S3D




● PT8-S3D

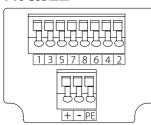


O Pluggable screw terminal type


● PT4-P3D □-□



● PT6-P3D □-□



● PT8-P3D ☐ - ☐




■ Connecting Crimp Terminals For Spring/Pluggable Screw Terminal Type

Spring terminal type

Remove bolts on the terminal cover using a tool such as a screwdriver and open the cover.

- Connection
- 1) Push the end sleeve (ferrule) crimp terminal towards direction 1 to complete the connection.
- Removal
- 1) Press and hold the catch above the terminal in direction ② with a flat-head screwdriver.
- 2) Pull and remove the end sleeve (ferrule) crimp terminal towards direction 3.



Pluggable screw terminal type

Remove bolts on the terminal cover using a tool such as a screwdriver and open the cover.

Remove the terminal also as above order.

- Connection
- 1) Push the end sleeve (ferrule) crimp terminal towards direction 1 to complete the connection.
- Removal
- 1) Press and hold the catch above the terminal in direction ② with a flat-head screwdriver.
- 2) Pull and remove the end sleeve (ferrule) crimp terminal towards direction 3.

(A) Photoelectric Sensors

(unit: mm)

(C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure Sensors

(F) Rotary Encode

(I) SSRs / Power Controllers

(J) Counters

(K) Timers

(M) Tacho / Speed / Pulse Meters

(N) Display Units

(O) Sensor Controllers

(P) Switching Mode Power Supplies


(Q) Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels

Autonics

Sold Separately


O Protection cover (CAP-PT)



**This protection cover is used for protecting connection holes from dust or particle, etc. Please push it into hole.

XIf using protection covers, protection structure of the sensor distribution box is IP52.

○ Waterproof cover (P96-M12-1)



**This waterproof cover is used for protecting unused connection hole from water or oil, etc.

Please tighten it when applying to the ports.

XIf using waterproof covers, protection structure of the sensor distribution box is IP67.

○ M23 connector cable (only for M12 5-pin connector)

	12-pin[3-wire (1-sig	gnal)]		19-pin[4-wire (2-si	ignal)]					
Model	CLDH12C -040	CLDH12C -060	CLDH12C -080	CLDH19C -040	CLDH19C -060	CLDH19C -080				
Dimensions			926 926 926 927	Ø	10.5 (12-pin) 13 (19-pin) m/6m/8m	(unit: mm)				
Pin arrangement		0 9 8 2 0 0 7 3 0 6 4 5								
Cable length ^{×1}	4m	6m	8m	4m	6m	8m				
Applied model	PT4-C3DN5, PT4- PT6-C3DN5, PT6- PT8-C3DN5, PT8-	C3DP5		PT4-C4DN5, PT4-C4DP5, PT6-C4DN5, PT6-C4DP5 PT8-C4DN5, PT8-C4DP5						
	Pin no.	Cable color	AWG	Pin no.	Cable color	AWG				
	1	White		1	Purple					
	2	Green	1	2	Red	7				
	3	Yellow	1	3	Gray	AWG22				
	4	Gray	T	4	Red/Blue	7				
	5	Pink	AWG22	5	Green	7				
	6	Red	1	6	Blue	AWG17				
	7	Black	1	7	Gray/Pink					
	8	Purple	1	8	White/Green	7				
Connection	9	Blue		9	White/Yellow	AWG22				
cable	10	1—	7,,,,,,,,,,	10	White/Gray	7				
	11	Brown	AWG17	11	Black					
	12	Green/Yellow	7	12	Green/Yellow	AWG17				
				13	Yellow/Brown					
				14	Brown/Green					
				15	White	AWG22				
				16	Yellow	AVVGZZ				
				17	Pink					
				18	Gray/Brown					
				19	Brown	AWG17				

X1: Cable length can be customized.


G-16 Autonics

(unit: mm)

■ Example Of Connections


O Connection with cable type sensor

It is available to connect a cable type sensor proximity sensor (PRW Series) with a sensor distribution box directly. When installation distance is longer, use a connector cable.



O Connection with connector type sensor

When connecting a connector type proximity sensor (PRCM Series) with a sensor distribution box, use only connector cable.

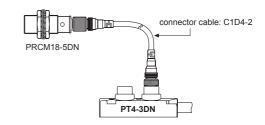

(A) Photoelectric Sensors

(B) Fiber Optic

(C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure Sensors

(F) Rotary Encoders

■ Connectable Autonics Proximity Sensors, Photoelectirc Sensors, Door/Area Sensors

Sensor distribution box	Input logic	Proximity sensor		Photoelectric sensor	Door/Area sensor	Connection method	
		PRCMT12-2/4DO, DC PRCMT18-5/8DO, DC PRCMT30-10/15DO, DC	PRDCMT12-4/8DO,DC PRDCMT18-7/14DO,DC PRDCMT30-15/25DO,DC			Use connector cable	
PTI-3DN ENTI-3DN5 ty	DC 2-wire	PRWT12-2/4DO, DC PRWT18-5/8DO, DC PRWT30-10/15DO, DC	PRDWT12-4/8DO,DC PRDWT18-7/14DO,DC PRDWT30-15/25DO,DC	_		Connect directly, Use connector cable	
PT□-3DN	DC 3-wire	PRCM12-2/4DN, DN2 PRCM18-5/8DN, DN2 PRCM30-10/15DN, DN2 PRCML18-5/8DN, DN2 PRCML30-10/15DN, DN2	PRDCM12-4/8DN,DN2 PRDCM18-7/14DN,DN2 PRDCM30-15/25DN,DN2 PRDCML12-4/8DN,DN2 PRDCML18-7/14DN,DN2 PRDCML30-15/25DN,DN2	BRP3M-MDT-C BR3M-MDT-C	_	Use connector cable	
PT::-3DN5-:: PT::-::3DN5	type	PRW12-2/4DN, DN2 PRW18-5/8DN, DN2 PRW30-10/15DN, DN2 PRWL18-5/8DN, DN2 PRWL30-10/15DN, DN2	PRDW12-4/8DN,DN2 PRDW18-7/14DN,DN2 PRDW30-15/25DN,DN2 PRDWL12-4/8DN,DN2 PRDWL18-7/14DN,DN2 PRDWL30-15/25DN,DN2	_		Connect directly, Use connector cable	
PT□-3DP I	DC 3-wire	PRCM12-2/4DP, DP2 PRCM18-5/8DP, DP2 PRCM30-10/15DP, DP2 PRCML18-5/8DP, DP2 PRCML30-10/15DP, DP2	PRDCM12-4/8DP,DP2 PRDCM18-7/14DP,DP2 PRDCM30-15/25DP,DP2 PRDCML12-4/8DP,DP2 PRDCML18-7/14DP,DP2 PRDCML30-15/25DP,DP2	BRP3M-MDT-C-P BR3M-MDT-C-P	_	Use connector cable	
PT3DP5	PNP output type	PRW12-2/4DP, DP2 PRW18-5/8DP, DP2 PRW30-10/15DP, DP2 PRWL18-5/8DP, DP2 PRWL30-10/15DP, DP2	PRDW12-4/8DP,DP2 PRDW18-7/14DP,DP2 PRDW30-15/25DP,DP2 PRDWL12-4/8DP,DP2 PRDWL18-7/14DP,DP2 PRDWL30-15/25DP,DP2	_		Connect directly, Use connector cable	
PT:::-4DN5-::: PT:::-::::4DN5	DC 4-wire NPN output type			BRP100-DDT-C BR100DDT-C BRP400DDT-C BR400DDT-C BR200DDTN-C BR200DDTN-C	BWC40-□H, HD BWC80-□H, HD BW20-□ BW40-□	Connect directly, Use connector cable	
PT:::-4DP5-::: PT:::-::::4DP5	DC 4-wire PNP output type	1		BRP100-DDT-C-P BR100-DDT-C-P BRP400DDT-C-P BR400DDT-C-P BRP200DDTN-C-P BR200DDTN-C-P	BW20-□P BW40-□P	Connect directly, Use connector cable	

XStandard cable type sensors can also connect a sensor distribution box by using plug type connector cable.

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/ Sockets

(H) Temperature Controllers

(I) SSRs / Power Controllers

(J) Counters

ners

(M) Tacho / Speed / Pulse Meters

(N) Display Units

(O) Sensor Controllers

(P) Switching Mode Power Supplies

(Q) Stepper Motors & Drivers & Controllers


(R) Graphic/ Logic Panels

(S) Field Network Devices


(T) Software

Autonics G-17

Connections

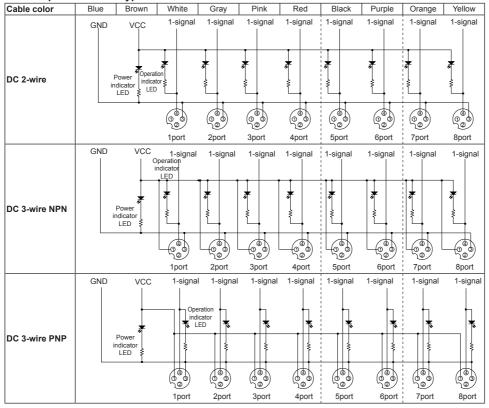

• 3-wire (1-signal)

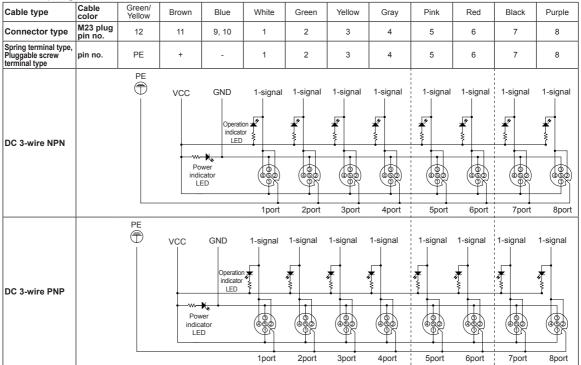

G-18 Autonics

Connections

M12 5-pin connector type

• 4-wire (2-signal)

Cable	(Z-Sigila	_	1			0/	1	D-4/	1	14/1-:4-/		Danie		\A/I=:4=/	1	I Vallanni		\A/l=:4=/	1	C/
type	Cable color	Green /Yellow	Brown	Blue	White	Gray/ Pink	Green	Red/ Blue	Yellow	White/ Green	Gray	Brown/ Green	Pink	White/ Yellow	Red	Yellow/ Brown	Black	White/ Gray	Purple	Gray/ Brown
Connector		/ Tellow				FIIIK		Diue		Gleen		Gleen		Tellow		DIOWII		Glay		DIOWII
	pin no.	12	19	6	15	7	5	4	16	8	3	14	17	9	2	13	11	10	1	18
туре	piii iio.				_	_		_		_		_	_	_		_	_			4
	PE		vcc	indi	ration cator	—2-signal	1-signal	——2-signal	1-signal	—2-signal	——1-signal	2-signal	1-signal	2-signal	——1-signal	—2-signal	1-signal	——2-signal	——1-signal	—2-signal
DC 4-wire NPN				Ц	ED 3		*	*	*		*	***	**	**	**	**	*	*	**	***
			Po	wer cator	(a) (b)		(4)		(4)		(4)		46		(0)		(4)		(4)	
					1p	ort	2p	ort	3р	ort	4p	ort	5p	ort	6р	ort	7p	ort	8p	ort
		PE	vcc	indi	ration cator	2-signal	1-signal	2-signal	1-signal	2-signal	——1-signal	2-signal	——1-signal	2-signal	1-signal	2-signal	1-signal	—2-signal	1-signal	2-signal
DC 4-wire PNP					#P	***	**	× ×	**		**	**		**************************************	**	***	**	*=	W	**
			Pov	wer cator	(4)		(40)		(4)		(4)		(4)		(4)		(4)		(4)	
					1n	ort	2r	ort	25	ort	45	ort	· -	ort	C	ort	7	ort	0	ort

Cautions During Use

- 1. This connection box is only for DC. Do not use this unit for AC.
- 2. Use DC 2-wire, DC 3-wire, DC 4-wire separately. DC 3-wire, DC 4-wire are separated by NPN type and PNP type.
- 3. Do not use the same conduit with cord of this unit and electric power line and power line. Also avoid the same connection.
- 4. Be sure that wire power cable (brown: +, blue: -) properly.
- 5. Check the voltage variation range of power not to over the rated specifications for power input.
- 6. In case of M12 4-pin connector type, the power indicator (green LED) does not operate when polarity is not correctly connected.
- 7. In case of M12 5-pin connector type, Tighten the screws and connector with the proper tightening strength. (M4 mounting screw: max. 1.2N·m / M12 Connector: 0.6 to 0.7N·m / M23 Connector: 2.0 to 2.5N·m) When tightening is bad, protection is not effective and it may loose by vibration.
- 8. If transceiver is close to wire connections, it may cause malfunction.
- 9. When take out the connector from the box, cut off the power.
- 10. It might cause malfunction, if particle of metal etc. inflow in to engaging.
- 11. Do not use this unit when external force loaded on contact block and connection of cover. It may cause loss of efficiency of protection.
- 12. Follow the connections when wiring the signals. After connecting loads, operate proximity sensors.
- 13. Check the operation indicator when operating the sensors.
- 14. Do not use in place there are water or oil etc.
- 15. Main body is made by plastic, therefore do not put heavy load on this product.
- 16. Please avoid below environment for long-term storage.
 - 1 Lots of dust or high humidity
 - 2 Ammonia or sulfide gas

(A) Photoelectric Sensors

(B) Fiber Optic Sensors

> (C) Door/Area Sensors

(D) Proximity Sensors (E) Pressure Sensors

> (F) Rotary

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/ Sockets

(H) Temperature Controllers

(I) SSRs / Power Controllers

> (J) Counters

(K) Timers

Panel Meters

(M) Tacho / Speed / Pulse Meters

> N) Display

O) ensor ontrollers

(P) Switching Mode Power Supplies

(Q) Stepper Motors & Drivers

Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels

(S) Field Network Devices

Γ)

Autonics G-19