Autonics COUNTER **F/L SERIES**

Α М Α





Thank you very much for selecting Autonics products For your safety, please read the following before using.

Caution for your safety

*Please keep these instructions and review them before using this unit.

⚠ Warning Serious injury may result if instructions are not followed.

▲ Caution Product may be damaged, or injury may result if instructions are not followed.

☀The following is an explanation of the symbols used in the operation manual. A caution: Injury or danger may occur under special conditions.

⚠ Warning


- In case of using this unit with machineries(Nuclear power control, medical equipment, vehicle, train, airplane, combustion apparatus, entertainment or safety device etc), it requires installing fail-safe device, or contact us for
- It may result in serious damage, fire or human injury
- 2. This unit must be mounted on Panel.
- 3. Do not connect terminals when it is power on.
- It may give an electric shock.

 4. Do not disassemble and modify this unit, when it requires.
- If needs, please contact us.
 It may give an electric shock and cause a fire


- 1. This unit shall not be used outdoors.
- 1. It might shorten the life cycle of the product or give an electric shock.
 2. When wire connection, No.20AWG(0.50mm²) should be used and screw bolt on terminal block with 0.74N · m to 0.90N · m strength.

 It may result in malfunction or fire due to contact failure.
- 3. Please observe specification rating. might shorten the life cycle of the product and cause a fire
- 4. Do not use the load beyond rated switching capacity of Relay contact. may cause insulation failure, contact melt, contact failure, relay broken, fire etc.
- 5. In cleaning the unit, do not use water or an organic solvents.
 It might cause an electric shock or fire that will result in damage to the product.
 6. Do not use this unit at place where there are flammable or explosive gas, humidity, direct ray of the sun, radiant heat, vibration, impact etc.
- 7. Do not inflow dust or wire dregs into inside of this unit.

Ordering information

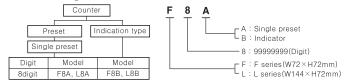

■ Panel cut-out

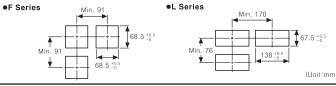

Input operation mode

Input Counting chart						
mode	SW1	Voltage input type	No-voltage input type			
Up/ Down-A (Command input)	1 2 3 ON OFF	cp1 H A A Counting 2 3 2 2 3 3	cp1 H A A A CP2 L CP2 L CP3 L			
Up/ Down-B (Individual input)	1 2 3 ON OFF	cp1 H cp2 H counting 2 3 2 1 2 3 value 0 1 1 1 1 2 3	cp2 H Counting 2 3 2 1 1 2 3 value 0 1 1 1 1 2 3			
Up/ Down-C (Phase difference input)	1 2 3 ON OFF	cp1 H GBB C C C C C C C C C C C C C C C C C C	cp1 H B86 B I I I I I I I I I I I I I I I I I I			
Up (Up input)	0 1 2 3 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	cp1 H A AI AI COUNTING Value 0 1 2 3 4 5 Counting value 0 1 2 3 4 5	cp1 H A A A A A A A A A A A A A A A A A A			
Up/ Down-D (Command input)	1 2 3 ON OFF	Counting n n-1 n-2 n-3 n-2 n-1 n-2 n-3	Counting n-1 -2 n-3 n-2 n-1 n-2 n-3			
Up/ Down-E (Individual input)	0 1 2 3 OFF	cp1 H Counting In-1 n-2 n-3 n-2 n-1 n-2 n-3	cp1 H			
Up/ Down-F (Phase difference input)	1 2 3 ON OFF	Counting 1 n-1 n-2 n-3 n-2 n-1 n-2 n-3	cp1 H B88B B Cp2 H Counting n n-1 n-2 n-3 n-2 n-1 n-2 n-3			
Down (Down input)	ON 1 2 3	Counting value Cop1 H No counting Cop1 H No counting Cop1 H No counting	cp1 H A A A COUNTING N			
		cp2 H	Counting n-1 n-2 n-3 n-4 n-5			

*A:Over Min. signal width. B:Over 1/2 of Min. signal width. Counting miss by one(±1) is occured if the signal width of A or B is less than min. signal width

★ The above specifications are subject to change and some models may be discontinued. ★ The above specifications are subject to change and some models may be discontinued. ★ The above specifications are subject to change and some models may be discontinued. ★ The above specifications are subject to change and some models may be discontinued. ★ The above specifications are subject to change and some models may be discontinued. ★ The above specifications are subject to change and some models may be discontinued. ★ The above specification are subject to change and some models may be discontinued. ★ The above specification are subject to change and some models may be discontinued. ★ The above specification are subject to change and some models may be discontinued. ★ The above specification are subject to change and some models may be discontinued. ★ The above specification are subject to change and specification are subject to change and specification are subject to change are subject to change and specification are subject to change are subject to c without notice.


Specifications

Series			F	L	
Digit			8	8	
Model	Singl	e preset	F8A	L8A	
		ation type	F8B	L8B	
Power	АСр	ower	100-240VAC 50/60Hz		
supply	AC/D	C type	12-24VAC 50/60Hz, 12-24VDC		
Allowab	vable voltage range		90 to 110% of rated voltage		
Power aC/DC power		AC power	Indication: Approx. 5.4VA, Single preset: Approx. 6.1VA(240VAC 50/60Hz)		
		AC/DC power	Indication:Approx. 5.5VA, Single preset:Approx. 6.3VA(24VAC 50/60Hz) Indication:Approx. 2.6W, Single preset:Approx. 3.1W(24VDC)		
Max. counting speed for CP1, CP2		g speed	1cps/30cps/2kcps/5kcps selectable by DIP switch		
Min.input RESET signal width input			Min. 20ms		
Input CP1, CP2 input [Voltage inp		CP2 input	"L" level:0-2VDC	/oltage input] Input impedance is 5.4kΩ, "H" level:5-30VDC,	
method	RESE	T input	[No-voltage input] Short-circuit impedance:Max. 1k\Omega, Residual voltage:Max. 2VDC, Open-circuit impedance:Min. 100k\Omega		
	Con-	- Type	Single preset t	ype : SPDT(1c)	
Control output			250VAC 3A resistive load		
	Solid-	- Туре	Single preset type: NPN open collector		
	state	Rating	30VDC Max. 100mA Max.		
Memory retention		ition	10 years(EEPROM)		
External power supply		er supply	12VDC ±10% 50mA Max.		
Ambient temperature		perature	-10 to 55℃(at no	n-freezing status)	
Storage temperature		erature	-25 to 65℃(at no	n-freezing status)	
Ambient humidity		idity	35 to 8	35%RH	
Insulation resistance		istance	100MΩ (a:	t 500VDC)	
Dielectr	ic stre	ngth	2000VAC 50/60	Hz for 1 minute	
Noise		power	±2kV the square wave noise(pulse	e width:1µs) by the noise simulator	
immunit	У АС/	DC power	±500V the square wave noise(puls	e width:1µs) by the noise simulator	
Vibration	Mechanical		0.75mm amplitude at frequency of 10 to 55Hz in each of X, Y, Z directions for 1 hour		
	Mal	function	in each of X, Y, Z dire	equency of 10 to 55Hz ections for 10 minutes	
Shock		chanical	300m/s² (Approx. 30G) 3 times at X, Y, Z direction		
SHOCK	Mai	function	100m/s² (Approx. 10G) 3 times at X, Y, Z direction		
Relay		chanical	Min. 10,000,000 times		
	Electrical		Min. 100,000 times(250VAC 3A resistive load)		
Weight			F8A:Approx. 287g, F8B:Approx. 253g	L8A:Approx. 500g, L8B:Approx. 446g	

Input logic selection

Please be sure to turn power OFF before changing input logic.


•F series
Input logic is changable by input logic selection switch located at the one-side of case.

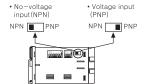


●L series Input logic is changable by input logic selection switch located at the terminal block

> · No-voltage input(NPN) F 🔳 S • Voltage input(PNP) F 🔳 S

Case & DIP switch detachment

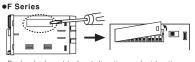



Push a lock part to front direction and widen it *Be careful in order not to be wounded.

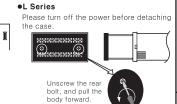

☐ ← Hold output

Connections

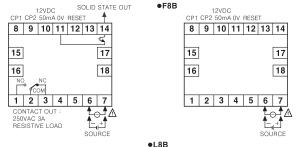

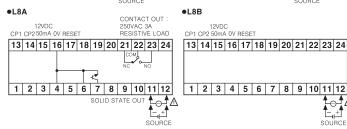


Output operation mode

■ ← One-shot output(0.05 to 5sec)


_	One-shot output(0.05 to	5sec)	ia output
Output mode	Up, Up/Down-A, B, C	mode Down, Up/Down-D, E, F	Operation after Count up
SW1 456 ON OFF	RESET Setting 0	RESET Setting 0	The display value continues until reset signal is applied and the output will be held. Hold output is held until reset signal is applied.
SW1 4 5 6 ON OFF	RESET Setting O Output	RESET Setting O	The display value and hold output are held until reset signal is applied.
SW1 456 ON OFF	RESET Setting O Output	RESET Setting 0	The display value returns to reset start status as soon as display value is reached to preset value.
SW1 4 5 6 ON OFF	RESET D Setting 0 Output	RESET Setting 0 Output	The display value is held until output is OFF then returns to reset start status.
SW1 4 5 6 ON OFF	RESET Setting O	RESET Setting 0 Output	The display value continues until reset signal is applied.
SW1 4 5 6 ON OFF	RESET Setting O	Setting 0 Output	The display value is held during one—shot output time, counting process is returned to reset start status as soon as output is ON.
SW1 4 5 6 ON OFF	RESET Setting O	RESET O Output	The display value continues during one -shot output time.
SW1 ON 4 5 6 OFF	Setting Output H H Up/Down-A, B, C RESET Setting Output H H Up/Down-A, B, C	Down RESET	Up, UP/Down-A, B, C input mode -Output is ON when (Display value) ≥ (Preset value) Down, UP/Down-D, E, F input mode -Output is ON when (Display value) ≤ (Zero)

Input connection

Olnput logic : Voltage input(PNP)

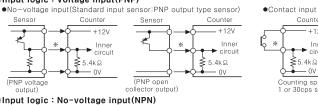


○Input logic : No-voltage input(NPN)

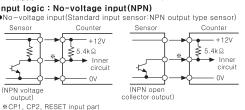

Input · Output connection

□In case of operating the load by power supply of the sensor

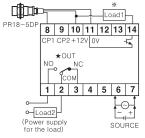

· Please select proper capacity of Load1 because total current consumption should not exceed current capacity (50mA max.). ★Contact capacity: 250VAC 3A Max Resistvie load.

OIn case of operating the load by external power supply

Counter

5.4kΩ 0V


Counting speed: 1 or 30cps setting

Counter +12V \$5.4kΩ Inner circuit

Counting speed 1 or 30cps setting

-+12V

Inner circuit

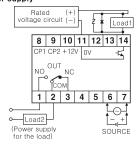

. The capacity of Load1 must not be exceed max 30VDC, max. 100mA of the switching capacity of the transistor.

Please do not supply the reverse polarity voltage


Please connect the surge absorber(Diode, Varistor etc.) at both terminals of Load1, in case of using the inductive load.

SW2

Memory retention


Selection by DIP switches



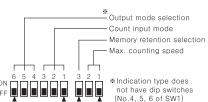


Power reset (Non memory) Memory Max. counting speed SW2 ON E


Function

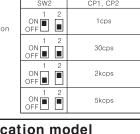

Counting operation of indication model

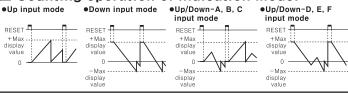


Decimal point setting

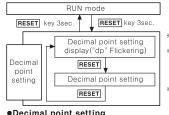

*It returns to decimal point setting status if pressing RESET button for over 3sec. in RUN mode.
*It returns to RUN mode if pressing RESET button for over 3sec. in decimal point setting status.
It returns to RUN mode if no RESET button or digital switch(2nd preset type:2nd preset digital switch) is applied for 60sec. in decimal point setting status.
*The decimal point setting is not existed in indication type.

Decimal point setting

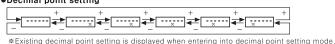

If pressing one of digital switch(2nd preset type:2nd preset digital switch) Up(+) buttons in decimal point setting mode, decimal point will be moved to Up(+) direction.

If pressing one of digital switch(2nd preset type:2nd preset digital switch) Down(-) buttons decimal point will be moved to Down(-) direction.

Caution for using

1. DIP switch setting

DIP switch setting
Please be sure to turn power OFF before changing Counter DIP switches setting.

If DIP switches setting is changed in power OFF, Counter must be reset by manual reset or external reset after power ON. 2. Error

Err C Zero setting value status Change setting value which is not zero *Output is OFF when error is displayed.

*If 1st preset value is chaged to zero("0"), 1st output keeps OFF status.


*No Error display is appeared in indication type.

Power

①The inner circuit voltage starts to rise up for the first 100ms after power on, the input may not

work at this time. And also the inner circuit voltage drops down for the last Power L OFF work at this time. And also the inner 500ms after nower off, the input may

ot work at this time. ②Please use the power within rating power and apply or cut the power at once to prevent from chattering

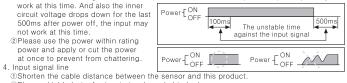

②Please shielded wire for input signal needed to be long. ③Please wire input signal line separated from power line.

5. When test dielectric voltage and insulation resistance of the control panel with this unit installed

①Please isolate this unit from the circuit of control panel. ②Please make all terminals of this unit short—circuited. 6. Do not use this unit at below places.

1) Place where there are severe vibration or impact 2 Place where strong alkalis or acids are used

 ©Place where there are direct ray of the sun.
 Place where strong magnetic field or electric noise are generated 7. Installation environment

①It shall be used indoor @Altitude Max. 2000m

③Pollution Degree 2 ④Installation Category II

*It may cause malfunction if above instructions are not followed.

Main products

Photoelectric sensors Temperature controllers
Fiber optic sensors Temperature/Humidity transducers
SSR/Power controllers

■ Stepper motors/drivers/motion controllers ■ Graphic/Logic panels

Autonics Corporation http://www.autonics.com Satisfiable Partner For Factory Automation

■ HEAD QUARTERS:

OVERSEAS SALES: 402-404, Bucheon Techno Park, 655, Pyeongcheon-ro

Wonmi-gu, Bucheon, Gyeonggi-do, Korea TEL: 82-32-610-2730 / FAX: 82-32-329-0728 E-mail: sales@autonics.com

EP-KE-01-0320