DIN W72×H72, W48×H96mm Counter/Timer

Features

- Counting speed: 1cps/30cps/2kcps/5kcps
 Selectable voltage input (PNP) method or no-voltage input (NPN) method
- Input mode: Up, Down, Up/Down
- Power supply: 100-240VAC 50/60Hz
- Dot for Decimal Point / Hour. Min. Second by RESET key
- Selectable Counter/Timer by internal DIP switch

• [Counter]
20 input modes/18 output modes

• [Timer]

16 output modes


Various time setting range - 8-digit model: 0.01 sec to 99999 hour 59.9 min /

6-digit model: 0.1 sec to 99999.9 hour / 4-digit model: 0.01 sec to 9999 hour

• Output: Indicator, 1-stage setting, 2-stage setting Please read "Safety Considerations" in operation



manual before using. Ordering Information

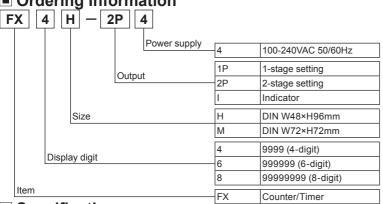

Specifications

	1-stage s	setting	FX4H-1P4	FX4M-1P4	FX6M-1P4	FX8M-1P4	
Model	2-stage s	setting	FX4H-2P4	FX4M-2P4	FX6M-2P4	-	
	Indicator		_	FX4M-I4	FX6M-I4	FX8M-I4	
Display d	digit		4-digit		6-digit	8-digit	
Characte	er size (W×H)	6×10mm		4×8mm	3.8×7.6mm	
Power su	upply		100-240VAC~ 50/6	100-240VAC∼ 50/60Hz			
Permissi	ble voltage ra	ange	90 to 110% of rated	voltage			
Power co	onsumption		• 1-stage: max. 4.6	VA • 2-stage	e: max. 5.8VA • I	Indicator: max. 3.8VA	
Max. cou	unting speed	of CP1/CP2	Selectable 1cps/30d	cps/2kcps/5kcps (DIP sv	witch)		
Return tii	me		Max. 500ms				
Min. sign	nal width		INHIBIT, RESET: ap	prox. 20ms			
Input method		[Voltage input (PNP) method]-input impedance: max. 10.8kΩ, [H]: 5-30VDC==, [L]: 0-2VDC [No-voltage input (NPN) method]-short-circuit impedance: max. 470Ω, short-circuit residual voltage: max. 1VDC, open-circuit impedance: min. 100kΩ					
One-sho	t output time		● 1-stage: 0.05 to 5 sec ■ 2-stage: 1st setting 0.5 sec fixed, 2nd setting 0.05 to 5 sec				
	Contact	Туре	1-stage: Instantar2-stage: OUT1-In	neuos SPDT (1c) stantaneuos SPDT (1c)	, OUT2-Instantaneuos SPE	OT (1c)	
Control output		Capacity	250VAC∼ 3A, 30VI	DC= 3A resistive load	,		
output	Solid state	Туре	• 1-stage: 1 NPN o	pen collector • 2-stage	e: OUT1-1 NPN open collec	ctor, OUT2-1 NPN open collector	
	Solid State	Capacity	Load voltage: max	x. 30VDC= • Load o	urrent: max. 100mA •	Residual voltage: max. 1VDC==	
Relay	Mechanical		Min. 10,000,000 op	erations			
life cycle	Electrical		Min. 100,000 operations (250VAC 3A resistive load)				
Repeat/S	Set/Voltage/T	emp. error	Max. ±0.01% ±0.05 sec				
Insulation resistance		Over 100MΩ (at 500VDC megger)					
External	power suppl	у	Max. 12VDC== ±10% 50mA				
Memory	retention		Approx. 10 years (non-volatile memory)				
	strength		2,000VAC 50/60Hz for 1 min (between all terminals and case)				
Noise im	munity		±2kV the square wa	ave noise (pulse width 1	μs) by noise simulator		

J-50 **Autonics**




Specifications

	1-stage setting	FX4H-1P4	FX4M-1P4	FX6M-1P4	FX8M-1P4		
Model	2-stage setting	FX4H-2P4	FX4M-2P4	FX6M-2P4	<u> </u>		
	Indicator	_	FX4M-I4	FX6M-I4	FX8M-I4		
/:h-==+:	Mechanical	0.75mm amplitude at fre	0.75mm amplitude at frequency 10 to 55Hz (for 1 min) in each X, Y, Z direction for 1 hour				
Vibration	Malfunction	0.5mm amplitude at free	uency 10 to 55Hz (for 1 min	n) in each X, Y, Z dir	ection for 10 minutes		
Shock	Mechanical	300m/s ² (approx. 30G) i	300m/s² (approx. 30G) in each X, Y, Z direction for 3 times				
Malfunction		100m/s ² (approx. 10G) i	100m/s² (approx. 10G) in each X, Y, Z direction for 3 times				
Environ-	Ambient temp.	-10 to 55°C, storage: -25	5 to 65°C				
ment	Ambient humi.	35 to 85%RH, storage: 3	35 to 85%RH, storage: 35 to 85%RH				
Protection	structure	IP20 (front part, IEC star	ndard)				
Approval		C€ c %\ us					
	1-stage setting	Approx. 245g (approx. 1	Approx. 245g (approx. 180g)				
Weight ^{**1}	2-stage setting	Approx. 265g (approx. 2	Approx. 265g (approx. 200g)				
	Indicator	Approx. 225g (approx. 160g)					


X1: The weight includes packaging. The weight in parenthesis is for unit only.

Connections




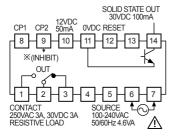


FX□M-2P4

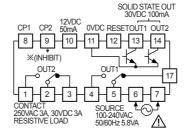


FX□M-I4

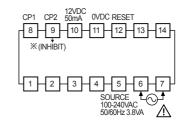

• FX4H-1P4

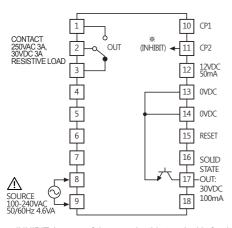

• FX4H-2P4

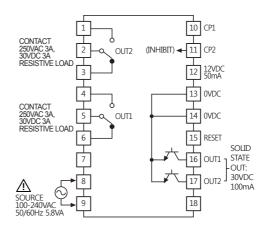

XINHIBIT: In case of timer mode, this terminal is for time hold.

(voltage input (PNP): connect with 12VDC, no-voltage input (NPN): connect with 0VDC)

(A) Photoelectric Sensors

(B) Fiber Optic

> (C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure

(F) Rotary Encoders

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/Sockets

Temperature Controllers

(I) SSRs / Power Controllers

(J) Counters

(K)

(L) Panel Meters

(M) Tacho / Speed / Pulse

(N) Display Units

> O) Sensor

(P) Switching Mode Power Supplies

(Q) Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels

(S) Field Network Devices

(T) Software

Autonics J-51


^{*}Environment resistance is rated at no freezing or condensation.

FXM/FXH Series

Dimensions


(unit: mm)



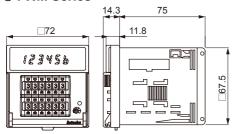


Panel cut-out


• FXM Series

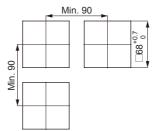


© Bracket (FXM, FXH Series universal)

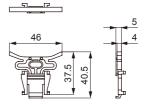

FXH Series

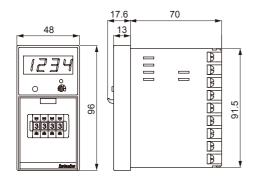


• FXH Series

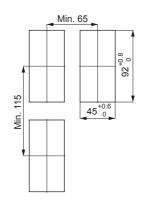


Input Connections


Voltage input (PNP)

• Solid-state input (standard sensor: PNP output type sensor)

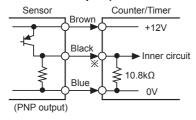

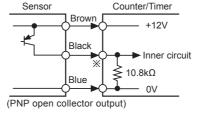


• Contact input

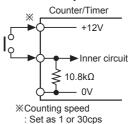


%CP1, CP2 (INHIBIT), RESET input part


○ No-voltage input (NPN)

• Solid-state input (standard sensor: NPN output type sensor)

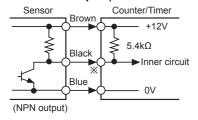

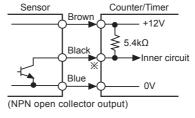

Contact input

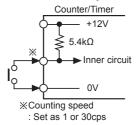

XCP1, CP2 (INHIBIT), RESET input part

J-52


■ Input & Output Connections

O When operation load by sensor power

Load1 9 10 11 12 13 14 PR18-5DP CP1 CP2 +12VDC 0VDC N.O. N.C COM 2 3 4 5 (power for operating load) o—Load2 SOURCE

 The sum of operating current capacity of load 1 and sensor should not be over external power capacity (50mA).


When operating load by external power

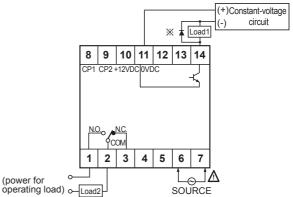

- The capacity of load 1 should not be over transistor switching capacity (max. 30VDC, 100mA)
- Do not supply the reverse polarity power.
 *when using inductive load (relay, etc.), connector surge absorber at both ends of the load 1


O How to count by external power supply

This unit starts to count when [H] (5-30VDC) is applied at CP1 or CP2 after selecting PNP.

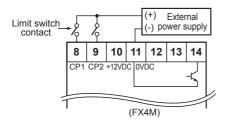

O Using 2 counters with one sensor

Please connect as the power of sensor is supplied from only one of counters and design input logic with same way.

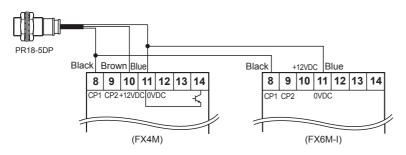

(A) Photoelectric Sensors

(B) Fiber Optic Sensors

(C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure Sensors

> (F) Rotary Encoders

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/Sockets

Sensor Distribut Boxes/Sockets (H)

(I) SSRs / Power Controllers

(J)

L)

(M) Tacho / Speed / Pulse

(N) Display Units

(O) Sensor Controllers

(P) Switching Mode Power Supplies

(Q) Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels

(S) Field Network Devices


> (T) Software

Autonics J-53

FXM/FXH Series

■ DIP Switch Setting

FXM Series

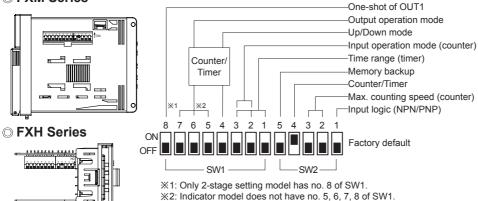

Input logic (CP1, CP2, INHIBIT, RESET input)

SW2		Function
4	ON OFF	NPN (no-voltage input)
1	ON OFF	PNP (voltage input)

Max. counting speed (counter)

SW2	3 2 ON OFF	3 2 ON OFF	3 2 ON OFF	ON OFF
Function	1cps	30cps	2kcps	5kcps

Counter/Timer

SW2		Function
	ON OFF	Counter mode
4	ON OFF	Timer mode

• Memory backup

SW	/2	Function
5		No memory backup
5	ON OFF	Memory backup

• Up/Down mode

SW	/1	Function
4	ON OFF	Down mode
4	ON OFF	Up mode

• Time range (timer)


SW1	4-digit	6-digit	8-digit
3 2 1 ON OFF	99.99sec	99999.9sec	999999.99sec
3 2 1 ON OFF	999.9sec	999999sec	9999999.9sec
3 2 1 ON OFF	9999sec	99min 59.99sec	99999999sec
3 2 1 ON OFF	99min 59sec	999min 59.9sec	99999min 59.9sec
3 2 1 ON OFF	999.9min	99999.9min	9999999.9min
3 2 1 ON OFF	99hour 59min	99hour 59min 59sec	999hour 59min 59.9sec
3 2 1 ON OFF	999.9hour	9999hour 59min	9999hour 59min 59sec
3 2 1 ON OFF	9999hour	99999.9hour	99999hour 59.9min

• One-shot output of OUT1

SW	1	Function
8	ON OFF	One-shot output of OUT1
•	ON OFF	Self-holding output of OUT1

**This function is for setting one-shot output (0.5 sec fixed) or self-holding output (until OUT2 turns OFF) of OUT1 at 2-stage setting model.

*Example of output operation mode F

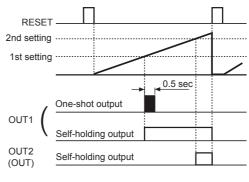

Power OFF \rightarrow change settings \rightarrow power ON \rightarrow press **RESET** key or input signal (min. 20ms)

J-54 Autonics

How to change settings


■ Input Operation Mode (Counter)

■ Inj	put Ope	∍ration	Mode (Counter)	※CP: Clock Pulse	(A) Photoelectric
Input mo	ode	SW1	Voltage input (PNP) method	No-voltage input (NPN) method	Sensors
	Up/ Down-A (command input)	ON 3 2 OFF	CP1 H	CP1 H A A A A A CP2 H A CP2 H A A A A A A A A A A A A A A A A A A	(B) Fiber Optic Sensors (C) Door/Area Sensors
	Up/ Down-B (individual input)	ON OFF	CP1 H CP2 H CP2 H COUNT 0 1 1 2 3 2 1 1 1 2 3	CP1	(D) Proximity Sensors (E) Pressure Sensors
Up mode ON OFF	Up/ Down-C (phase difference input)	ON OFF	CP1 H BBBB CP2 H Count 0 1 2 3 2 1 2 3	CP1 H BBBB CP2 H HHH CP2 H L L L L L L L L L L L L L L L L L L	(F) Rotary Encoders (G) Connectors/ Connector Cables/ Sensor Distribution Boxes/Sockets
	Up	3 2	CP1 H CP2 H No counting 3 Count 0 1 2 3	CP1 H A A A A S S S S S S S S S S S S S S S	(H) Temperature Controllers (I) SSRs / Power Controllers
	(adding input)	ON OFF	CP1 H No counting CP2 H A A A A A A A A A A A A A A A A A A	CP1 H No counting CP2 H A A A CP2 L L L L L L L L L L L L L L L L L L L	(K) Timers
	Up/ Down-D (command input)	3 2 ON OFF	CP1 H CP2 H Count 0	CP1 H	(M) Tacho / Speed / Pulse Meters (N) Display Units
	Up/ Down-E (individual input)	3 2 ON OFF	CP1 H	CP1 H	(O) Sensor Controllers (P) Switching Mode Power Supplies
Down mode ON 4 OFF	Up/ Down-F (phase difference input)	ON OFF	CP1 H BBBB B CP2 H HHH COUNT	CP1 H BBBB H HITH CP2 H HITH CP2 H HITH CP3 In 3 In 2 In 3 In 2 In 3 In 3 In 3 In	(Q) Stepper Motors & Drivers & Controllers (R) Graphic/ Logic Panels
	Down	3 2	CP1 H CP2 H n n-1 n-2 No counting Count O	CP2 H No counting	(S) Field Network Devices
	(subtracting input)	ON OFF	CP2 H No counting CP2 H No counting CP2 H No counting CP2 H NO counting COUNT COUNT 0	CP1 H No counting CP2 H NO count CP2 H NO count CP3 H NO counting CP3 H NO counti	

**A: over min. signal width, B: over than 1/2 of min. signal width. If the signal is smaller than these width, it may cause counting error (±1).

J-55 **Autonics**


Output Operation Mode

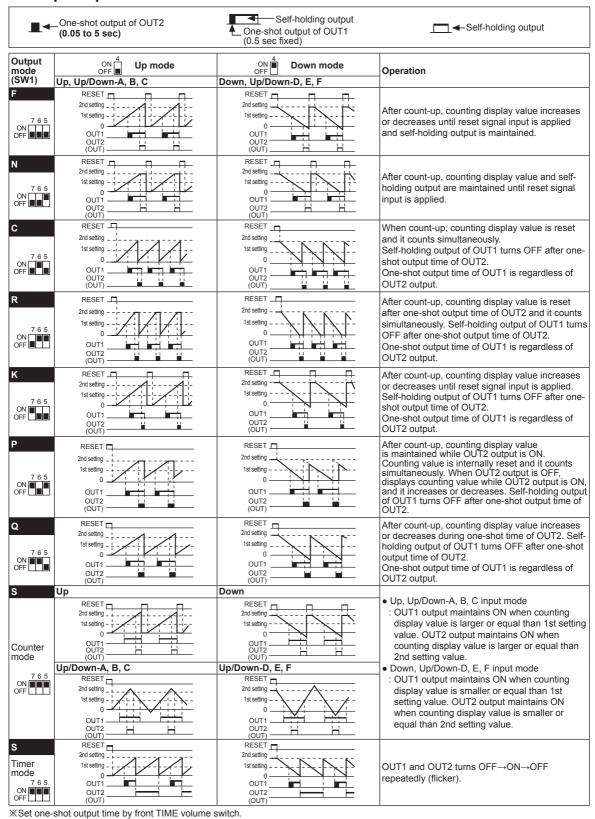


■ Counting & Time Operation For Indicator (FX□M-I4)

Counting operation

• Input mode: Up

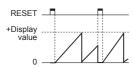


• Input mode: Up / Down-A, B, C

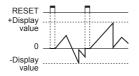


Time operation


• Up mode

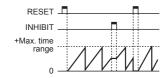


• Input mode: Down

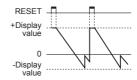


• Input mode: Up / Down-D, E, F

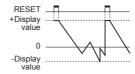

Down mode

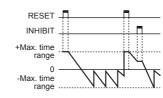

Dot for Decimal Point / Hour. Min. Second

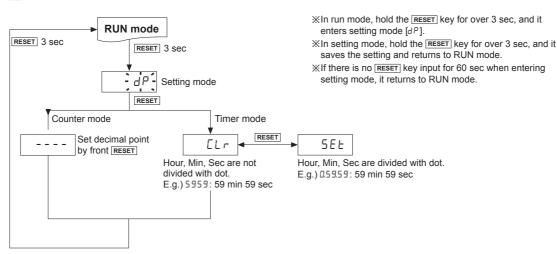

■ Error Display and Output Operation

Error Display	Error description	Troubleshooting
ErrO	Setting value is 0.	Change the setting value anything but 0.

*When error occurs, the output turns OFF.

*When 1st setting value is set as 0 (zero), OUT1 maintains OFF.

When 2nd setting value is smaller than 1st setting value, 1st setting value is ignored and only OUT2 output operates. **Indicator model does not have error display function. (A) Photoelectric Sensors

(B) Fiber Optic Sensors

> (C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure

(E)

Encoders

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/Sockets

(H) Temperature Controllers

(I) SSRs / Power Controllers

(J) Counters

(K) Timers

> L) Panel

(M) Tacho / Speed / Pulse

> l) isplay nits

(O) Sensor Controllers

(P) Switching Mode Power Supplies

(Q) Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels

> S) Field Network Devices

> T) Software

Autonics J-57

FXM/FXH Series

Proper Usage

- Follow instructions in 'Proper Usage'. Otherwise, it may cause unexpected accidents.
- Use the product, 0.1 sec after supplying power.
- When supplying or turning off the power, use a switch or etc. to avoid chattering.
- Install a power switch or circuit breaker in the easily accessible place for supplying or disconnecting the power.
- \bullet In case of contact input, set count speed to low speed mode (1cps or 30cps) to operate.
 - If set to high speed mode (2kcps or 5kcps), counting error occurs due to chattering.
- Keep away from high voltage lines or power lines to prevent inductive noise.
- In case installing power line and input signal line closely, use line filter or varistor at power line and shielded wire at input signal line.
- Do not use near the equipment which generates strong magnetic force or high frequency noise.
- This product may be used in the following environments.
 - ①Indoors (in the environment condition rated in 'Specifications')
 - ②Altitude max. 2,000m
 - ③Pollution degree 2
 - 4 Installation category II

J-58 Autonics